Function		Transmitted	Received	Remarks
Basic Channel	Default Change	1–16 1–16	1–16 1–16	Memorized
Mode	Default Messages Altered	X *******	3 X X	
Note Number	True voice	0–127 ********	0–127	۸*
Velocity	Note On Note Off	O 100, V=1–127 O 64, V=0–127	X X	***
After Touch	Key's Channel	X X	X X	
Pitch Bend		0	Х	
Control Change	0, 32	0	0	Bank Select (MBS, LSB) *F
	0–127	0	0	As control source *C
Program Change	True Number	O 0–127 ******	O 0–127 0–127	*F
System Exclusive		0	0	*E
System Common	Song Position Song Select Tune Request	X X X	X X X	
System Real Time	Clock Commands	0 0	O X	***
Aux Meassages	Local On/Off All Notes Off Active Sense System Reset	X X O X	X X X X	

*N: Transmitted/received when note numbers are enabled.

*P: Transmitted/received when program changes are enabled.

*C: Transmitted/received when control numbers are selected, and are enabled.

*E Transmitted/received when system exclusives are enabled. *1 When MIDI clock is internal, transmitted but not received. The opposite for External or Auto.

*2 Transmitted in "Ext. Ctrl" Mode.

Mode 1: Omni On, Poly Mode 3: Omni Off, Poly

Mode 2: Omni On, Mono Mode 4: Omni Off, Mono

Consult your local Korg distributor for more information on MIDI implementation.