

SC-6600
Wireless IP Phone
Administrator's Guide

Contents

1.	Introduction	4
2.	Getting Started	5
2.1.	Package Contents	5
2.2.	Keypad	5
2.3.	Turn On/Off the Power	6
2.4.	Load Default IP Address	6
2.5.	Enter Administrative Mode	7
2.6.	Locking & Unlocking the Keypad	7
2.7.	Adjusting the Speaker Volume	8
2.8.	Selecting the Character Mode	8
2.9.	Erasing the Character Mode	8
3.	Configuring Network Environment	9
3.1.	Network Configuration	9
3.1.1.	Fixed IP	9
3.1.2.	DHCP	10
3.1.3.	PPPoE	11
3.2.	Wireless Configuration	12
3.2.1.	Wireless LAN Settings	12
3.2.1.1.	Wireless LAN	12
3.3.	SIP Configuration	15
3.3.1.	Registrar IP Settings	15
3.3.2.	Outbound Proxy Settings	16
3.3.3.	SIP Proxy Server Settings	17
3.3.4.	Setting up the User Account	18
3.4.	Using the Phonebook	19
3.4.1.	Searching Phonebook Entries - Edit Entry	19
3.4.2.	Searching Phonebook Entries - Erase Entry	20
3.4.3.	Searching Phonebook Entries - Speed dial Entry	21
3.4.4.	Adding a Phonebook Entry	22
3.4.5.	Erasing Phonebook Entries - One By One	23
3.4.6.	Erasing Phonebook Entries - All	24
3.5.	Call History	25
3.5.1.	Missed Call	25
3.5.2.	Received Call	26

3.5.3.	Dialed Call	27
3.5.4.	Erasing Call	28
3.6.	Settings	29
3.6.1.	Setting the Ring Melody.....	29
3.6.2.	Setting the Vibration Mode.....	30
3.6.3.	Adjusting the Ring Volume	30
3.6.4.	Setting the Time	31
3.6.5.	Setting the Date.....	31
3.6.6.	Setting the Banner	32
3.6.7.	Setting the Key Lock	32
3.6.8.	Don't Disturb	33
4.	Web Configuration	34
4.1.	Login Password.....	34
5.	Basic Phone Tasks	35
5.1.	Dialing a Phone Number	35
5.2.	Redialing a Phone Number	35
5.3.	Answering a Call	35
6.	Display Messages	36
6.1.	Error Messages.....	36
6.2.	Warning Messages.....	37

1. Introduction

This is an Administrator's manual describing the wireless IP phone SC-6600 running in Administrative mode. Before using SC-6600, some setup processes are required to make the phone work properly. You should at least setup the IP address of SC-6600 and router when DHCP is disabled. When DHCP server is available, you can skip the process of setting up the SC-6600 IP address.

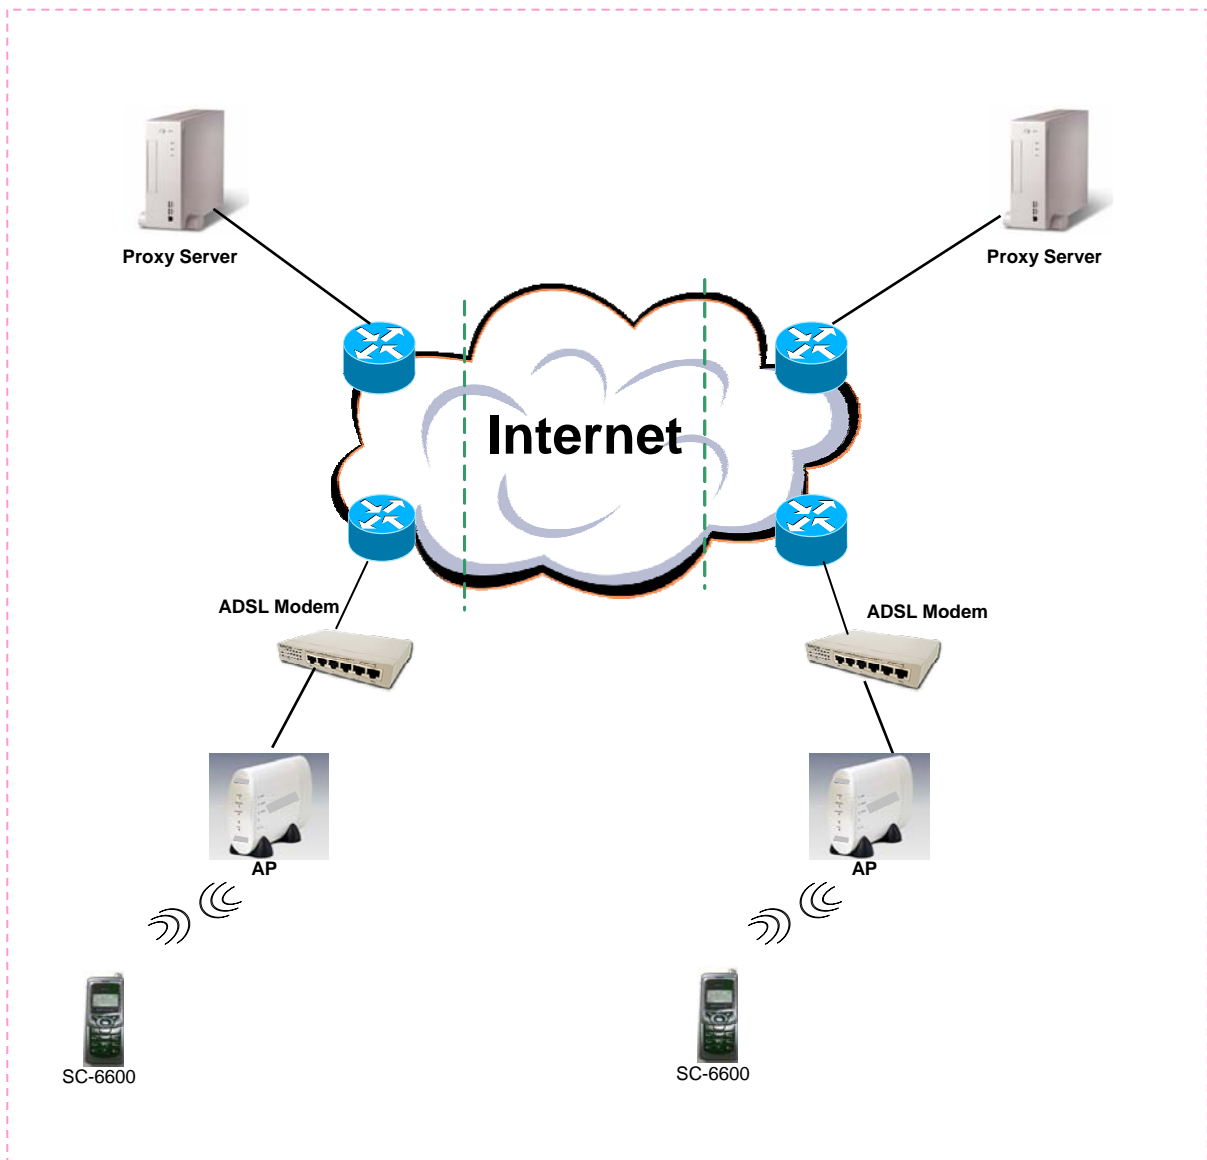


Figure 1.1 Network connections for SC-6600

2. Getting Started

Please check the following before using the SC-6600:

- Package contents
- How to install and remove the battery
- How to charge the battery
- How to turn on/off the device

2.1. Package Contents

You should find the following contents in your SC-6600 package:

- SC-6600 Wireless IP Phone x1
- Standard battery x1
- SC-6600 Wireless IP Phone User's Guide x1
- Power Supply (AC adapter) x1

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.


2.2. Keypad



Figure 2.2-1 SC-6600 Wireless IP Phone

<i>KEY</i>	<i>DESCRIPTION</i>
Soft key 1	This key is used for making selections on the bottom left side of the phone LCD, such as: Menu, Select, OK... Its current function is indicated by the word appearing above the key.
Soft key 2	This key is used for making selections on the bottom right side of the phone LCD, such as: Names, Back, Clear... Its current function is indicated by the word appearing above the key.
Arrow keys	Use the arrow keys to navigate through your phone's menus and submenus, as well as your Phonebook. The up / down arrow keys are also used for selecting the character mode: A, a, 1, @.
Talk Key	Use this key to answer a call or make a call.
End Key / Power Key	Use this key to end a call, reject a call or return to Standby mode. Press and hold this key for two seconds to switch off / switch on the phone.
Numerical / special keys	Use to enter numbers, characters or special characters.

2.3. Turn On/Off the Power

To turn on/off the power, press and hold the “” key for approximately 2 seconds.

The phone enters the “standby” mode; Main Screen is displayed as shown in Figure 2.3-1

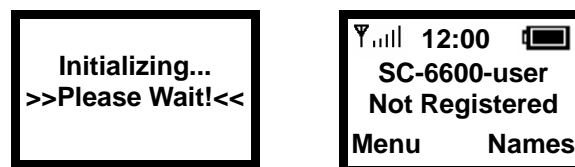


Figure 2.3-1 Standby Mode

2.4. Load Default IP Address

1. Turn of the power.
2. Press and hold the “” + “” keys for about 2 seconds to load the default IP address. SC-6600 will reset to the default IP address (192.168.0.6).

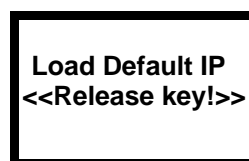





Figure 2.4-1 Load default IP

2.5. Enter Administrative Mode

1. Turn of the power.
2. Press the “  ” + “  ” + “  ” keys and hold till the <ENGINEER MENU> is shown on the LCD screen. Then release the keys.
3. In approximately 10 seconds, you will enter the main screen of the administrative mode.

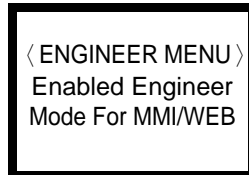



Figure 2.5-1 Administrative Mode

2.6. Locking & Unlocking the Keypad

Follow these steps to lock & unlock the keypad:

1. In idle state, hold the  key over 2 seconds or wait over 1 minute. The keypad will be locked, as shown in Figure 2.6-1.

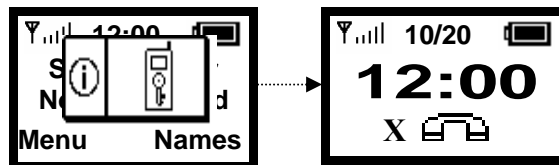


Figure 2.6-1 Keypad Locked

2. To release, press and hold the  key for approximately 2 seconds and the message will appear prompting you to confirm, the procedure like Figure 2.6-2.

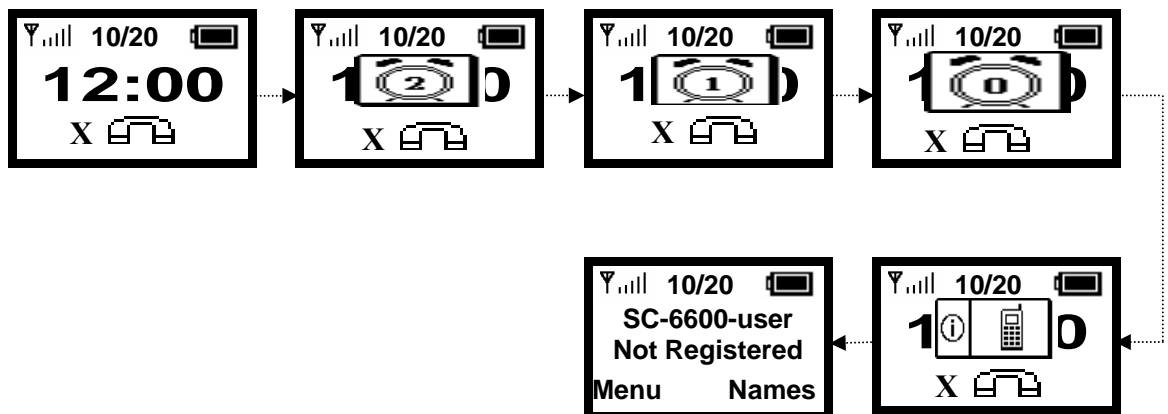


Figure 2.6-2 Keypad Unlocked

3. When locking, press any key would show, Figure 2.6-3.



Figure 2.6-3 Keypad Locked

2.7. Adjusting the Speaker Volume

During conversation, press the ” ⌘ “ key to increase the volume.

To decrease the volume, during conversation, press the ” ⌘ “ key. See Figure 2.7-1.

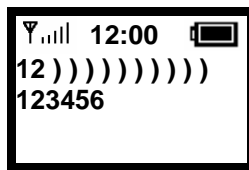


Figure 2.7-1 Adjusting the Speaker Volume

2.8. Selecting the Character Mode

Use the up / down arrow keys (▲ / ▼) to select the character mode: capital or lowercase characters, numbers or special characters (A, a, 1, @). See Figure 2.8-1.

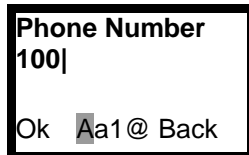


Figure 2.8-1 Selecting the Character Mode

2.9. Erasing the Character

When editing , press “  “ key would erase character . See Figure 2.9-1.

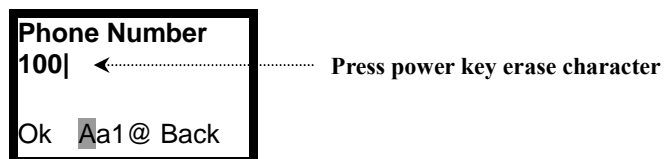


Figure 2.9-1 Erasing the Character Mode

3. Configuring Network Environment


This chapter explains how to modify the network environment.

3.1. Network Configuration

This section introduces modifications to the network information.


3.1.1. Fixed IP

This section introduces how to select Fixed IP.

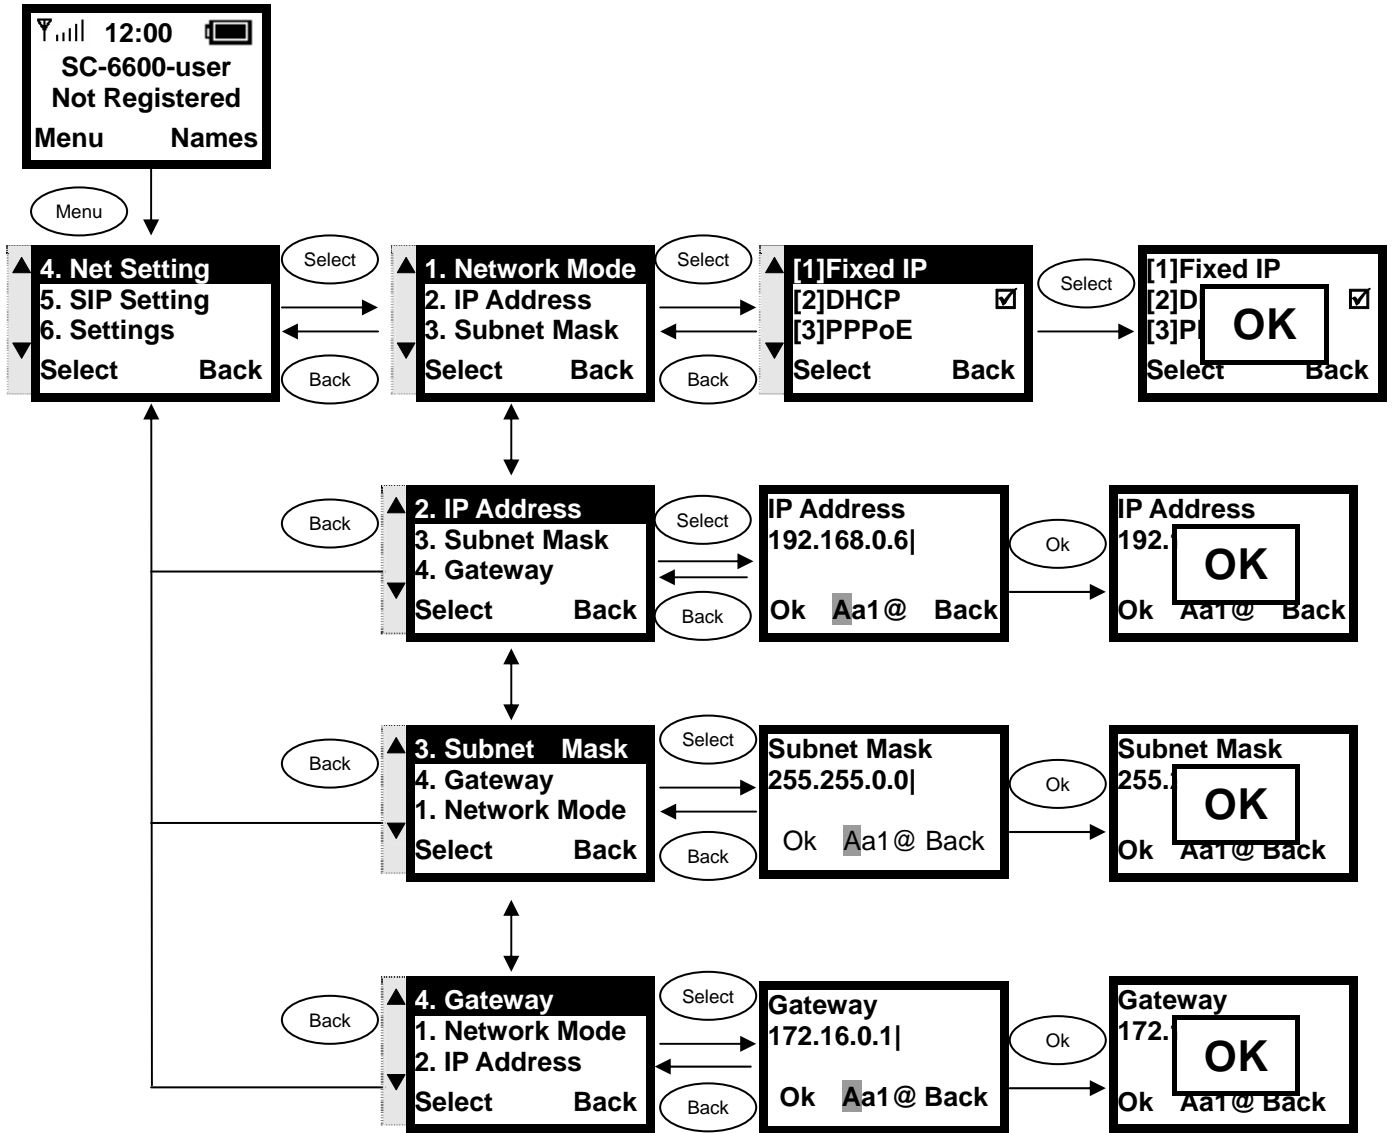


3.1.2. DHCP

This section provides instructions for performing the DHCP settings. The Dynamic Host Configuration Protocol (DHCP) client provides a mechanism for allocating IP address dynamically so that addresses can be reused when hosts no longer need them.

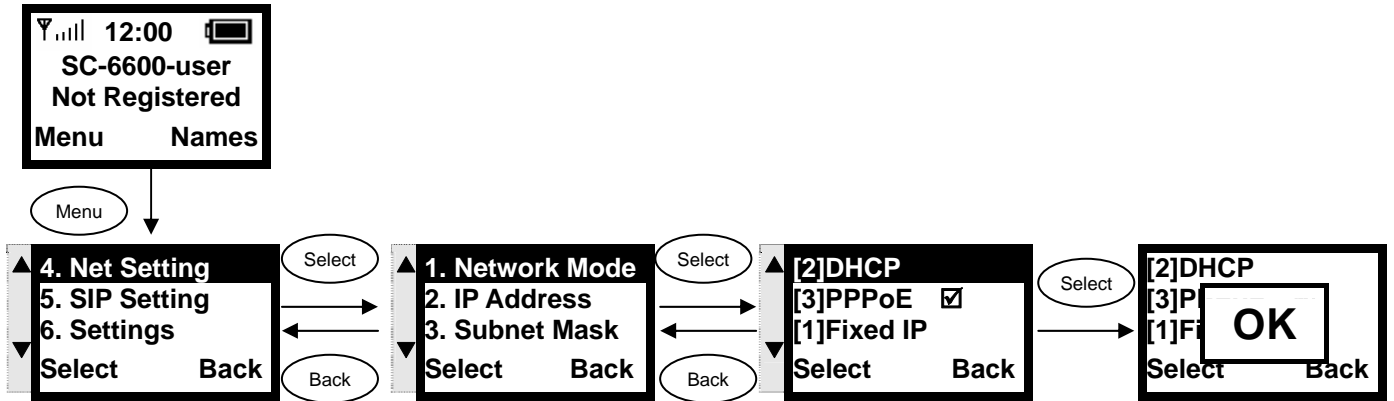

3.1.3. PPPoE

The Point-to-Point Protocol over Ethernet (PPPoE) provides more than just IP address assignment, which is the primary purpose of DHCP (assigning a unique and available IP address based upon a unique network adapter address). PPPoE also allows for the movement of TCP/IP traffic between two known points. It requires a username and password to log on.

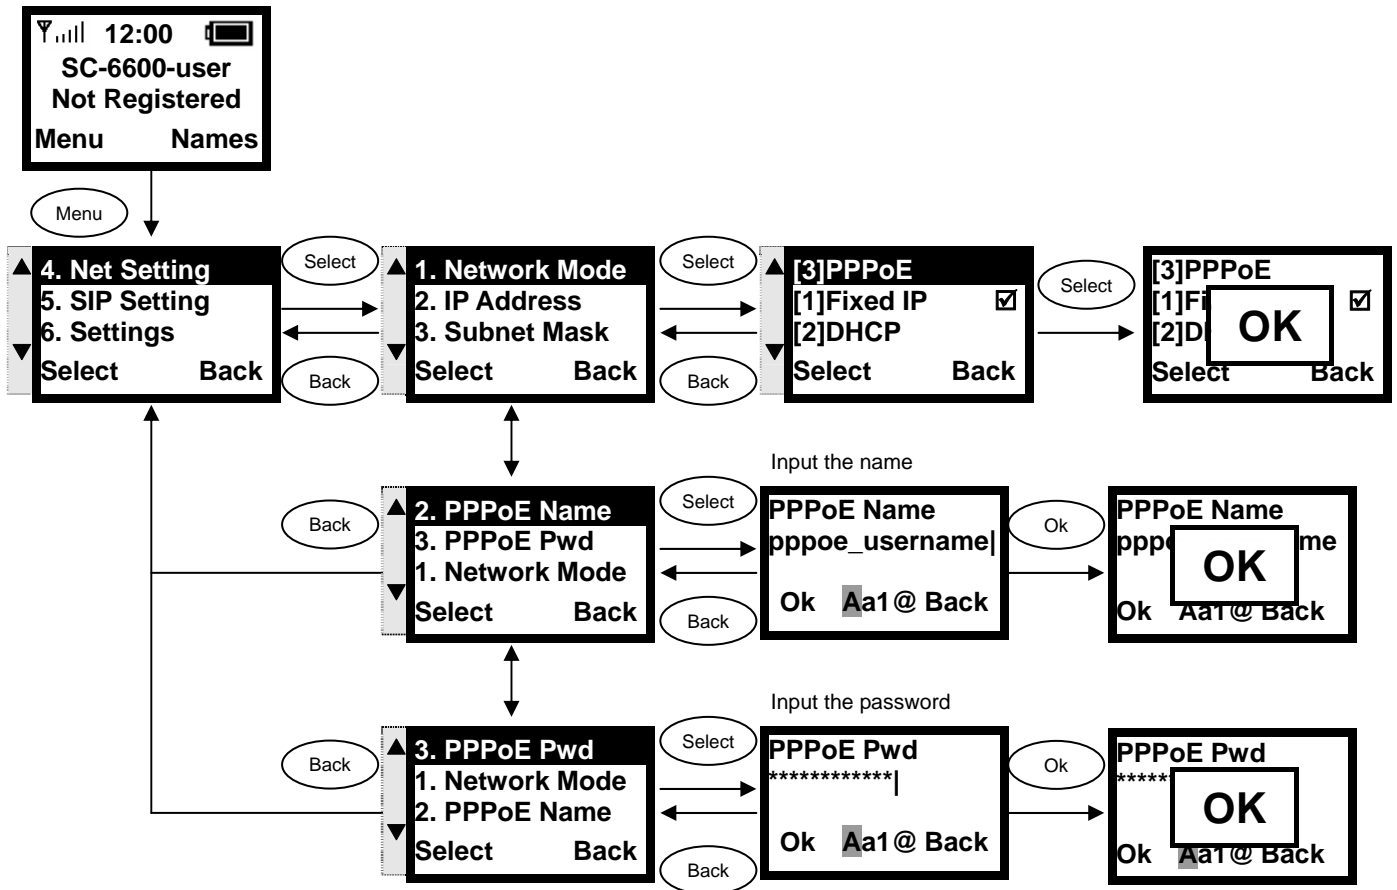

3.2. Wireless Configuration


This section provides instructions for configuring the wireless, 802.11b, configuration submenu.


3.2.1. Wireless LAN Settings


This section explains the following:

- Scanning for the Wireless Service Set Identifier
- Making wireless settings
- Setting up WEP Keys (Wireless Equivalent Privacy Keys)

3.2.1.1. Wireless LAN

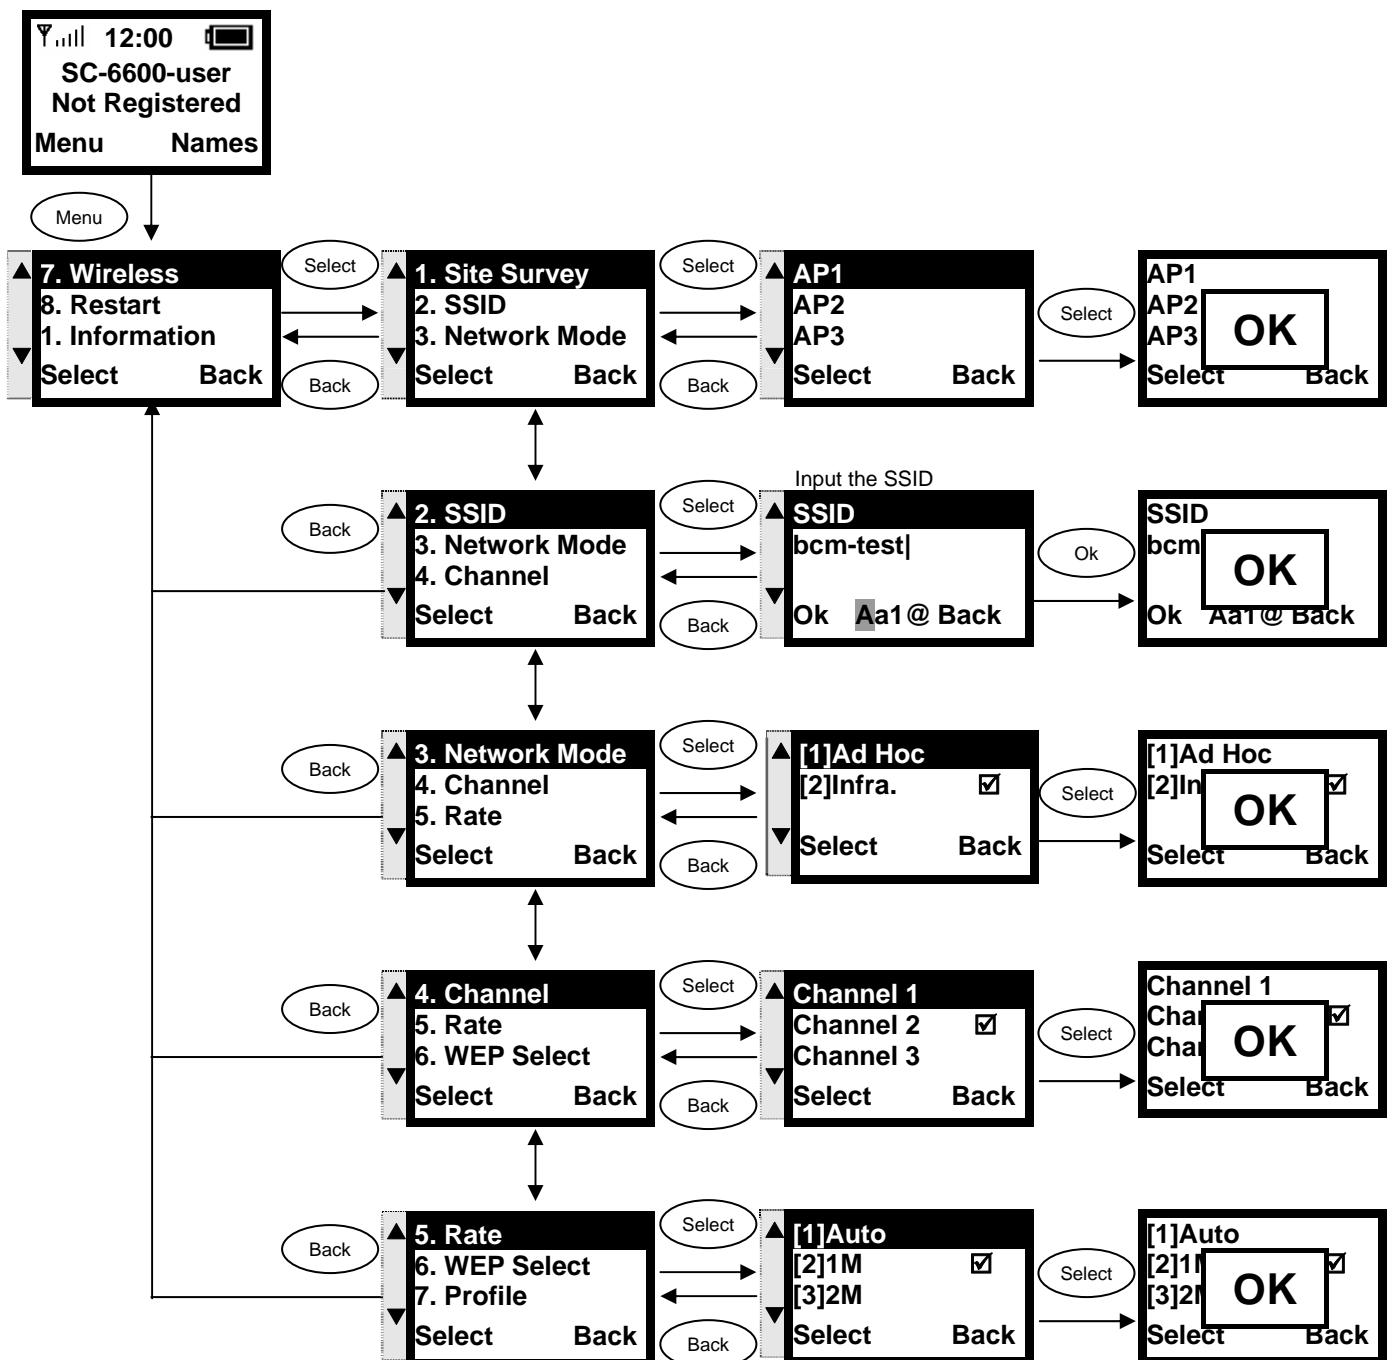

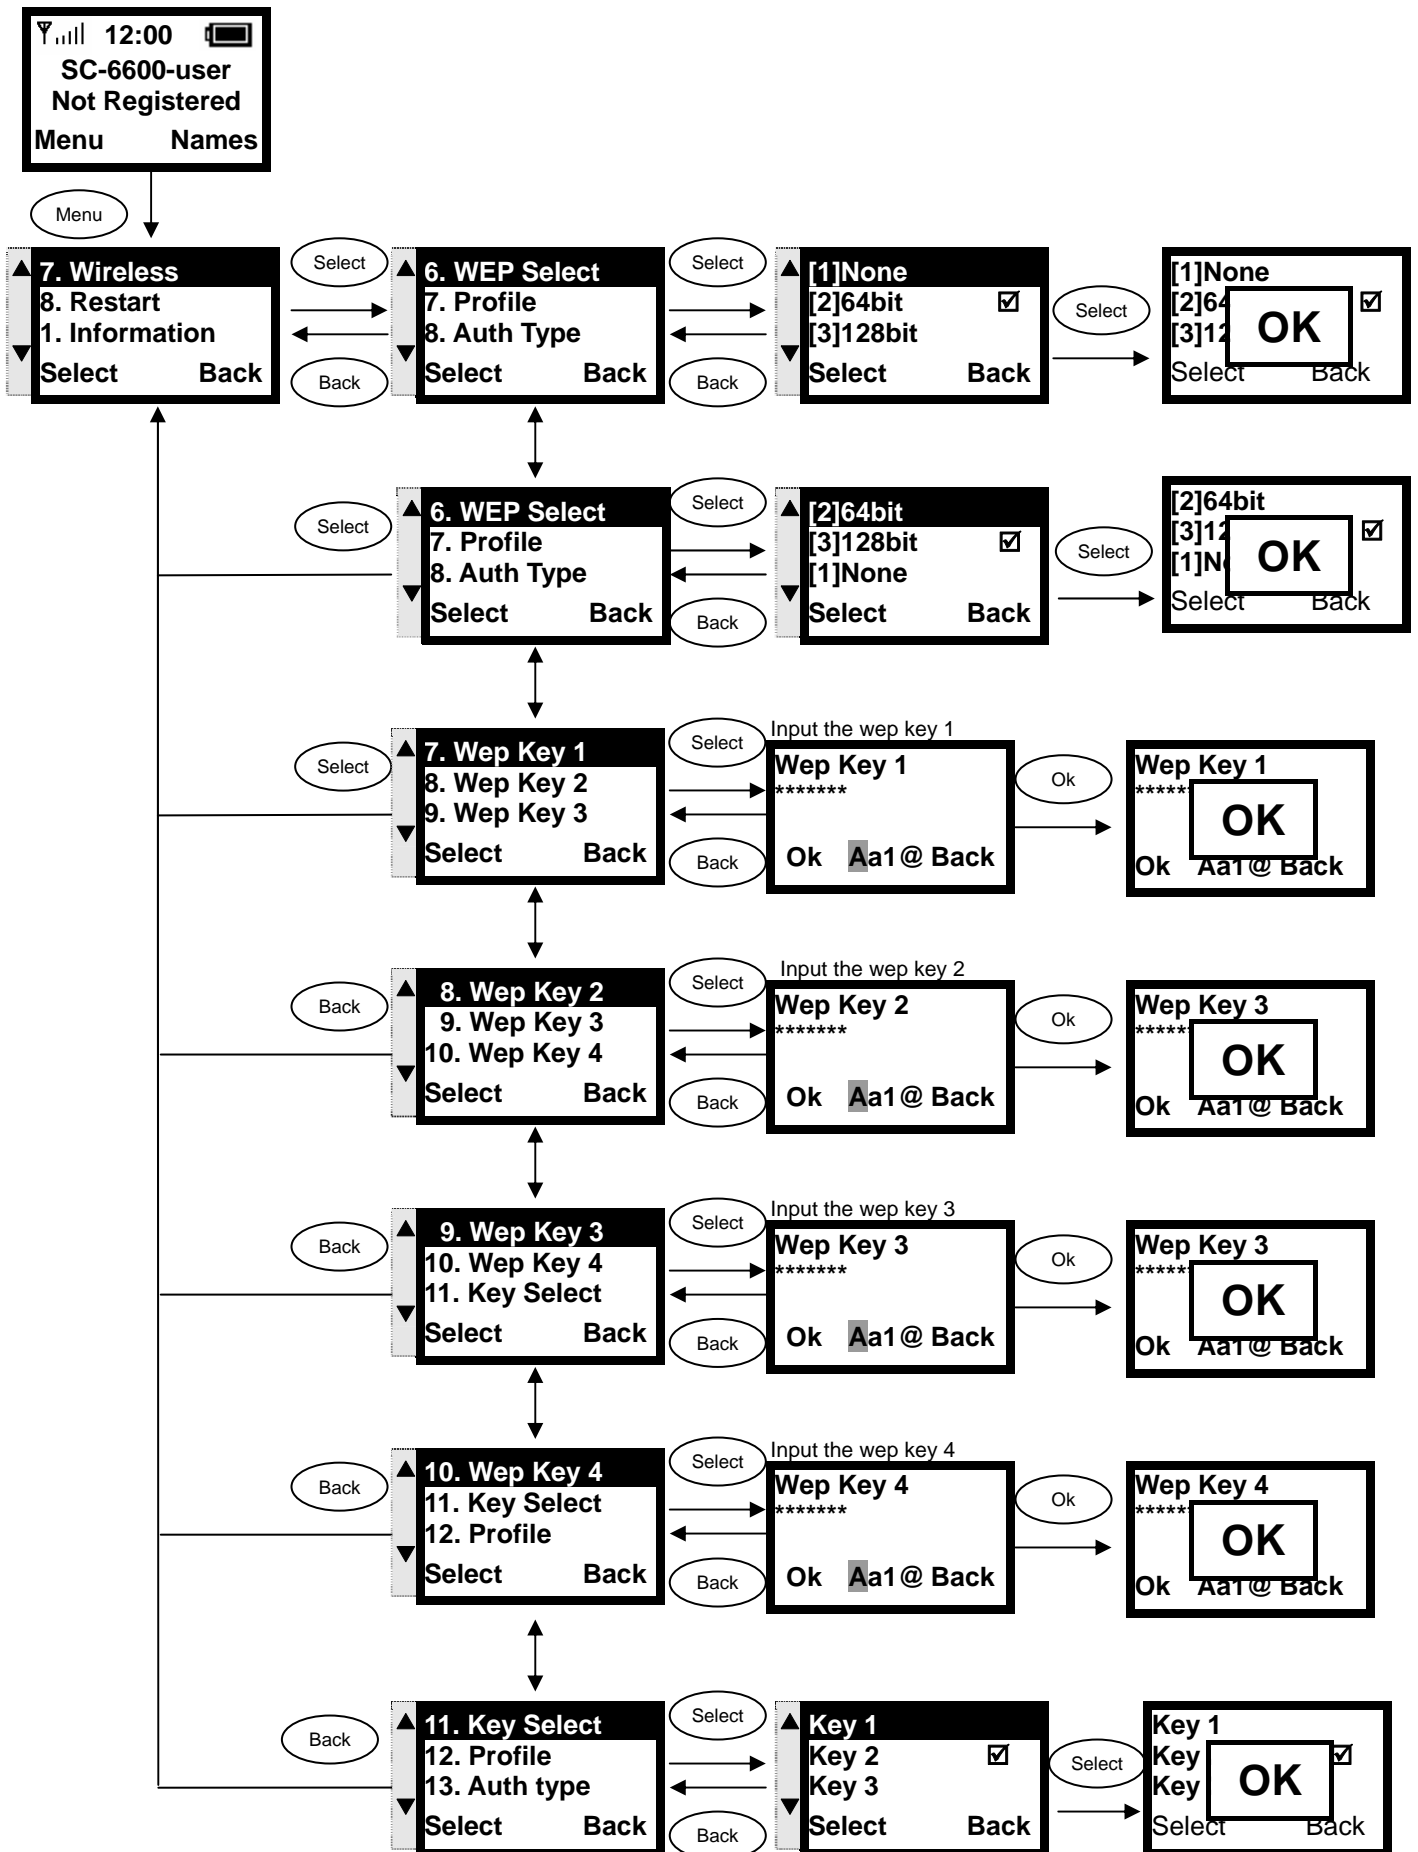

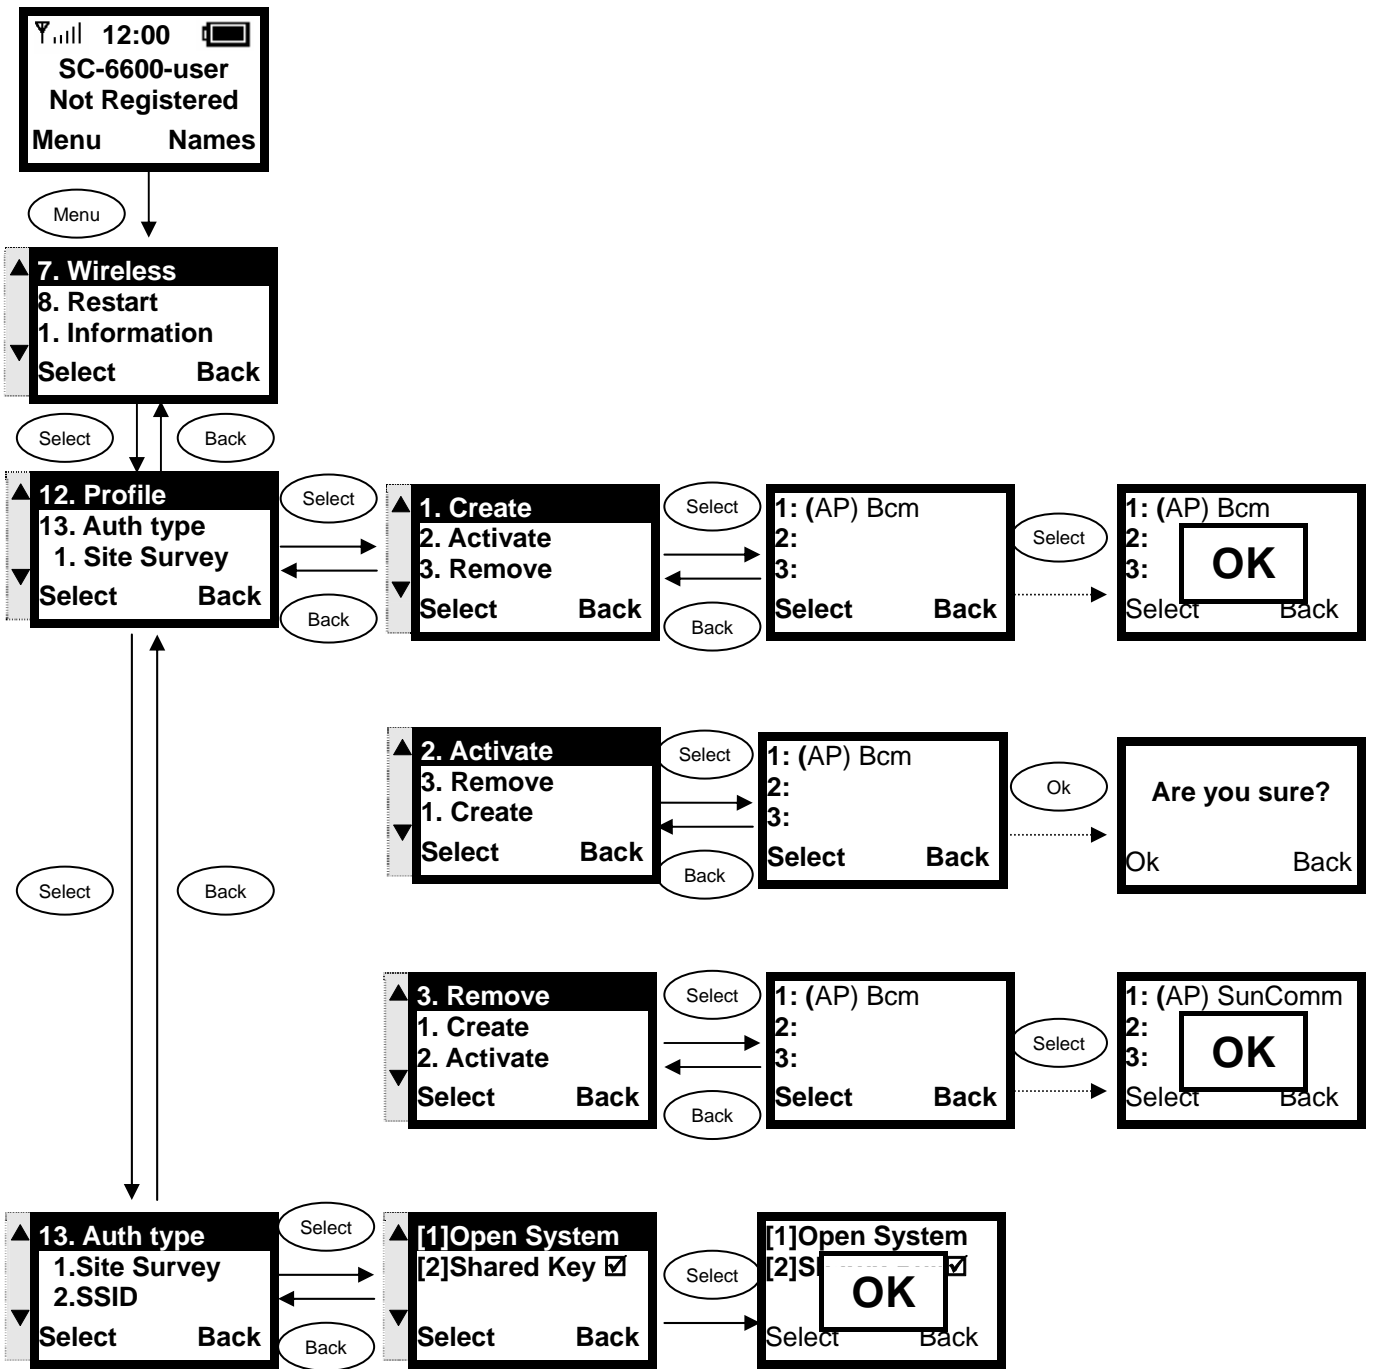


3.3. SIP Configuration


This section provides information on the Session Initiation Protocol (SIP) settings.

Please note that you have to configure both, Registrar Server , SIP Proxy Server and Outbound Proxy.


3.3.1. Registrar IP Settings

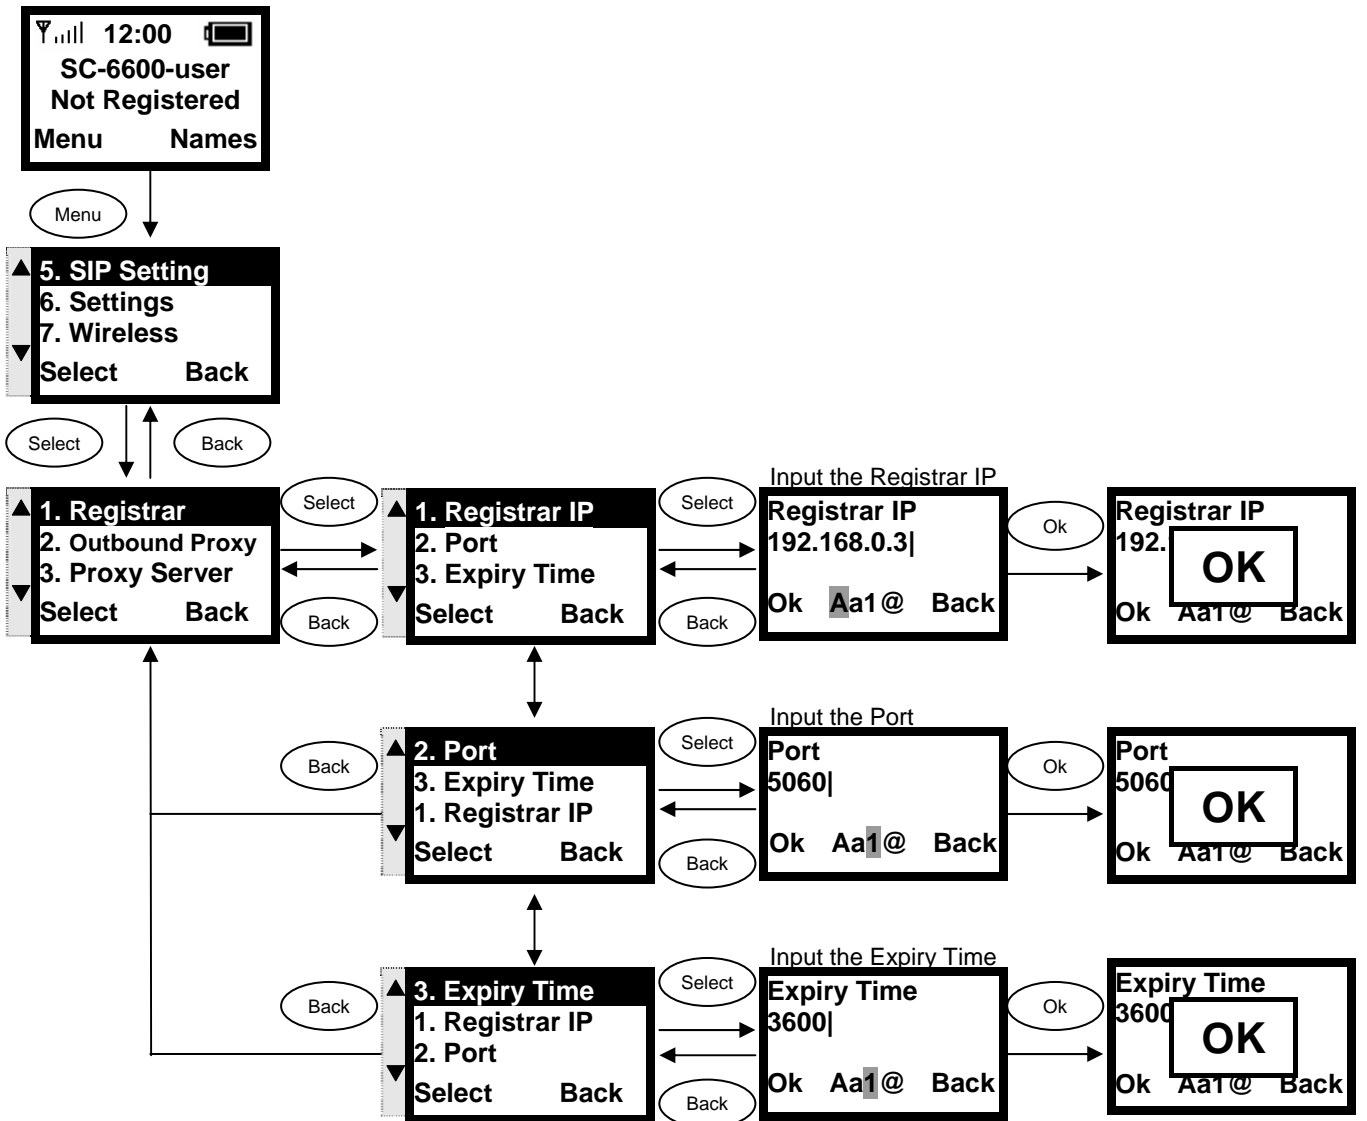

3.3.2. Outbound Proxy Settings

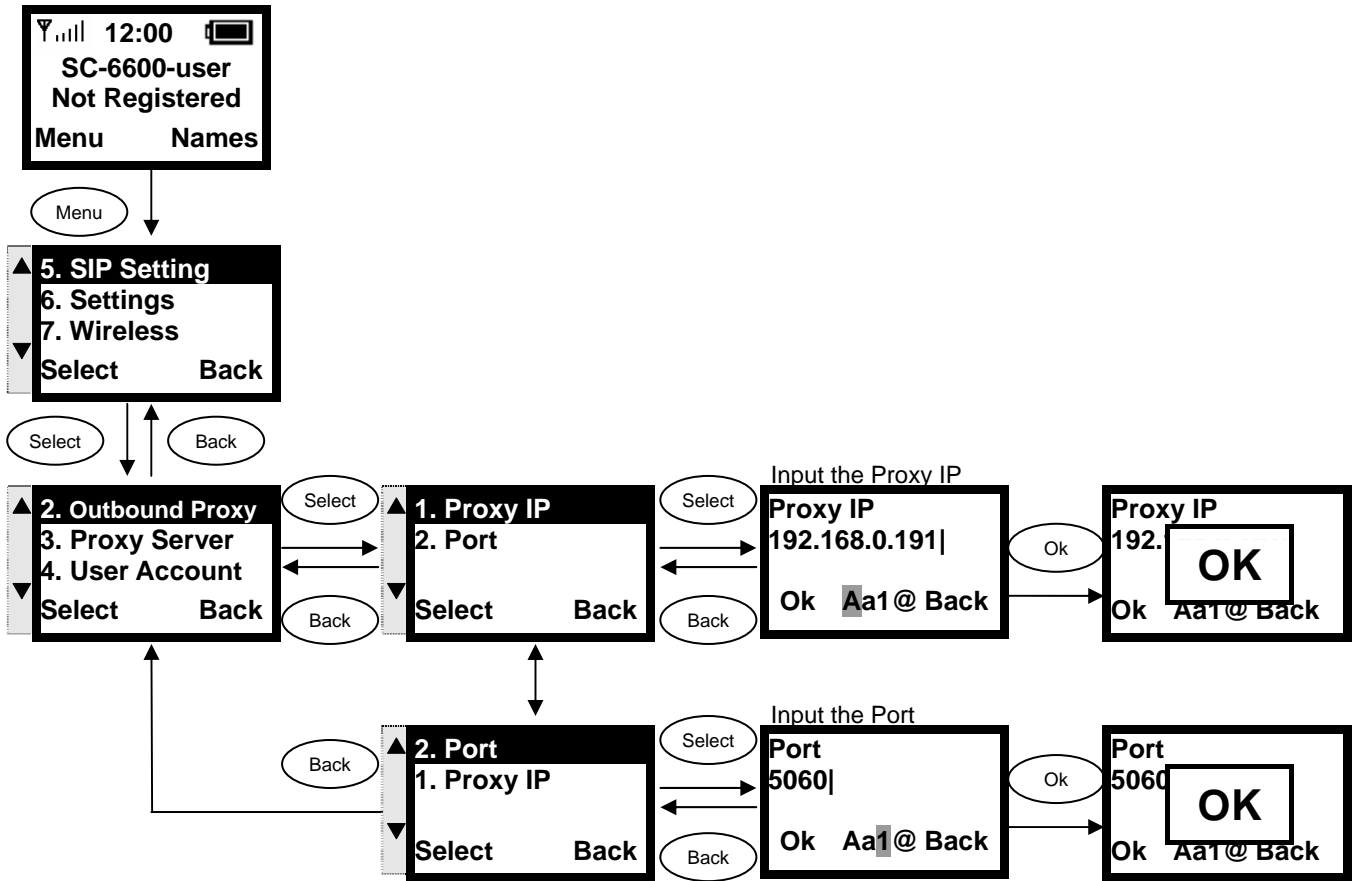


3.3.3. SIP Proxy Server Settings

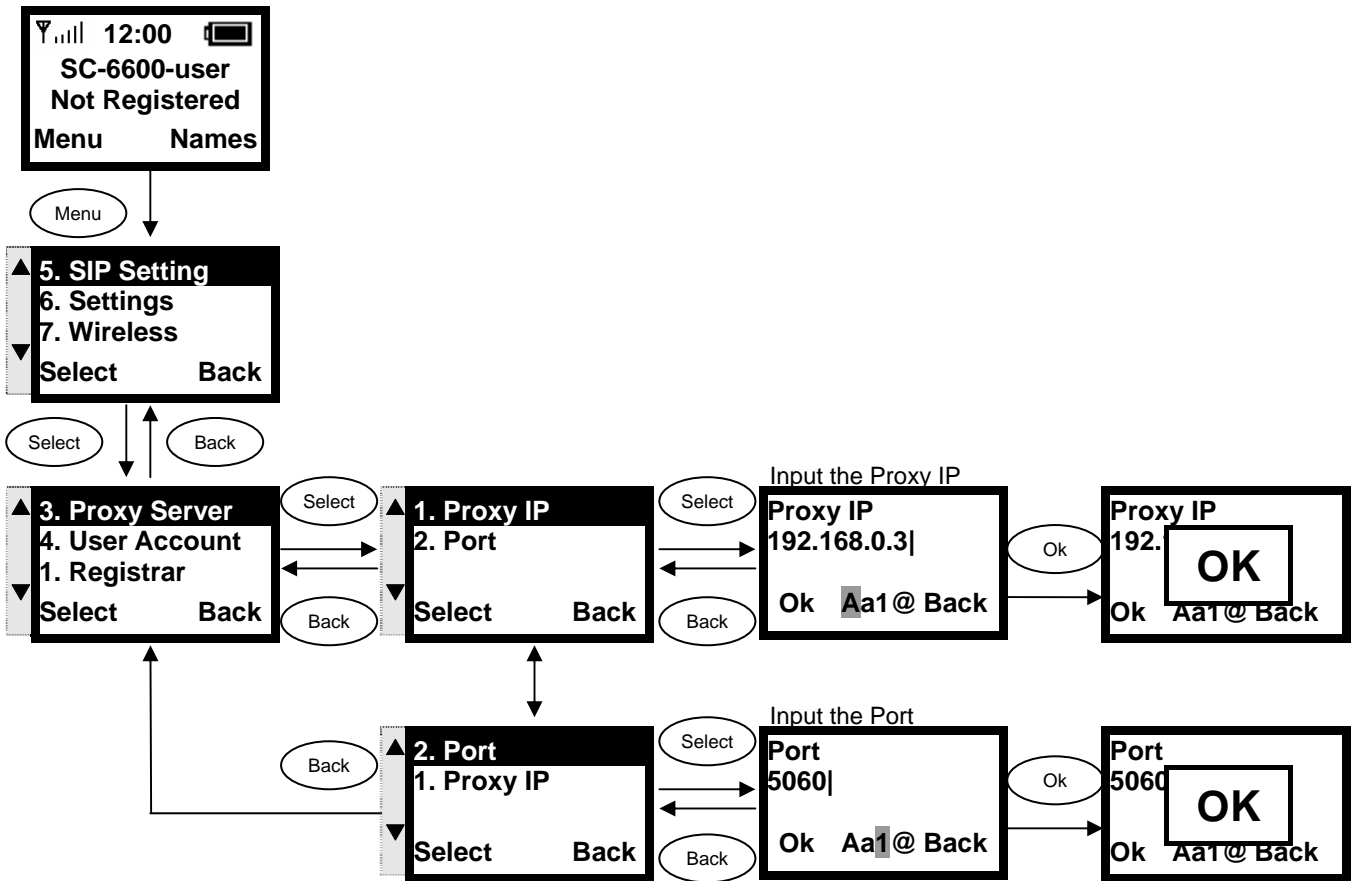

3.3.4. Setting up the User Account


This section explains how to set up your phone number, username and password you will be using to connect to the SIP server.

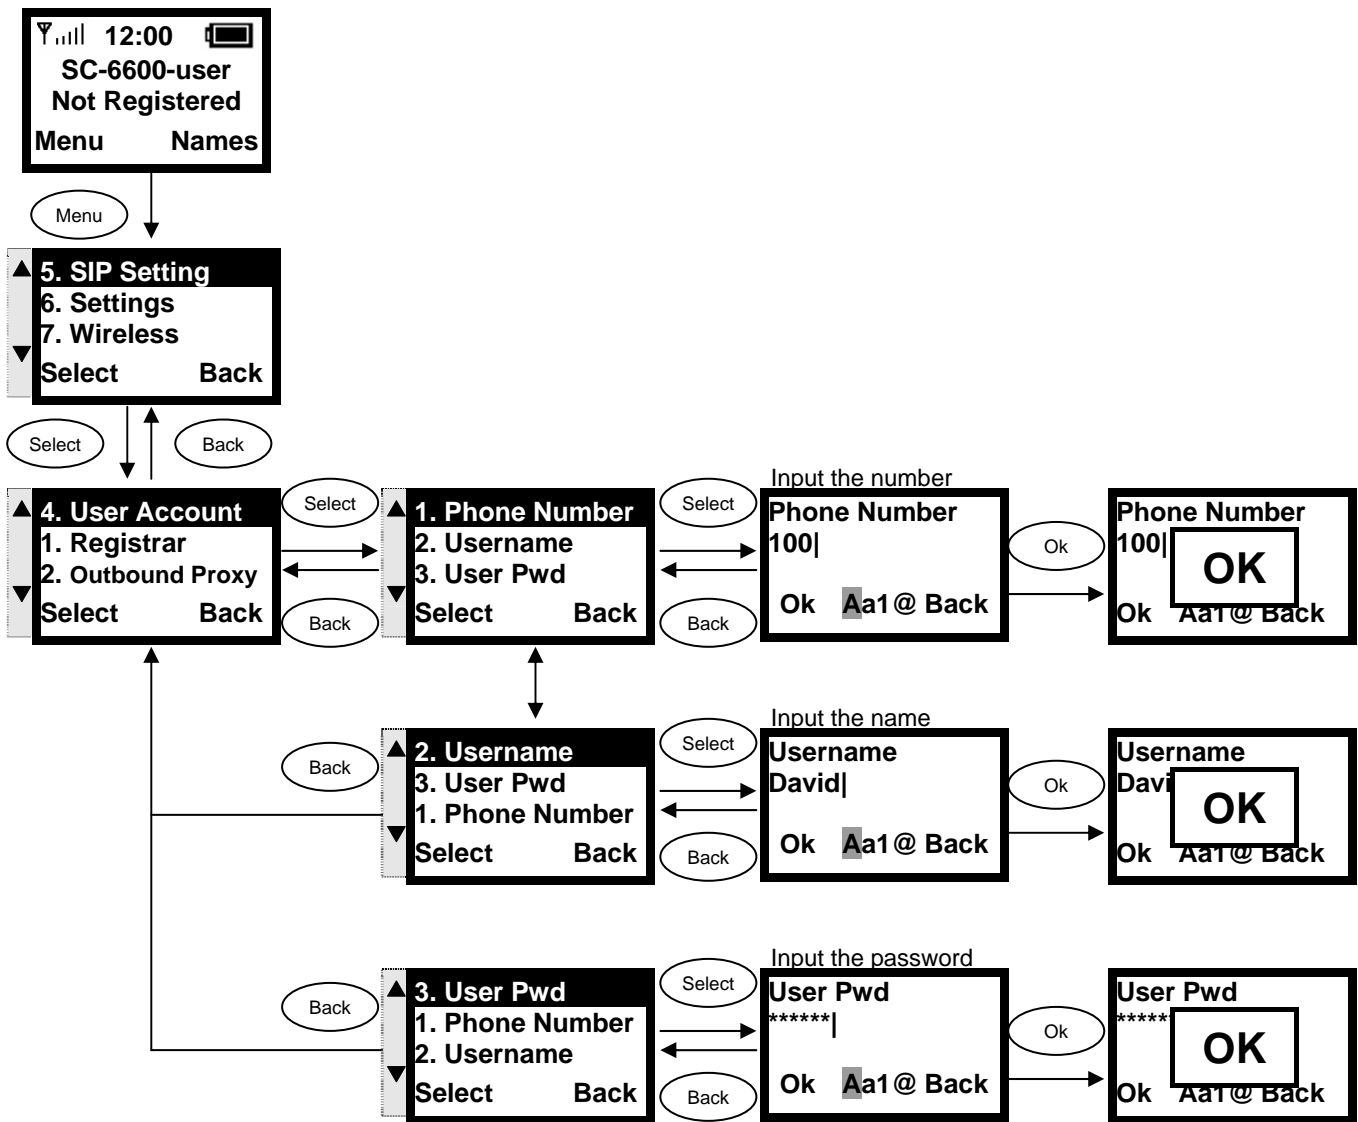


3.4. Using the Phonebook

This section provides information about accessing the phonebook and using its features.


3.4.1. Searching Phonebook Entries - Edit Entry

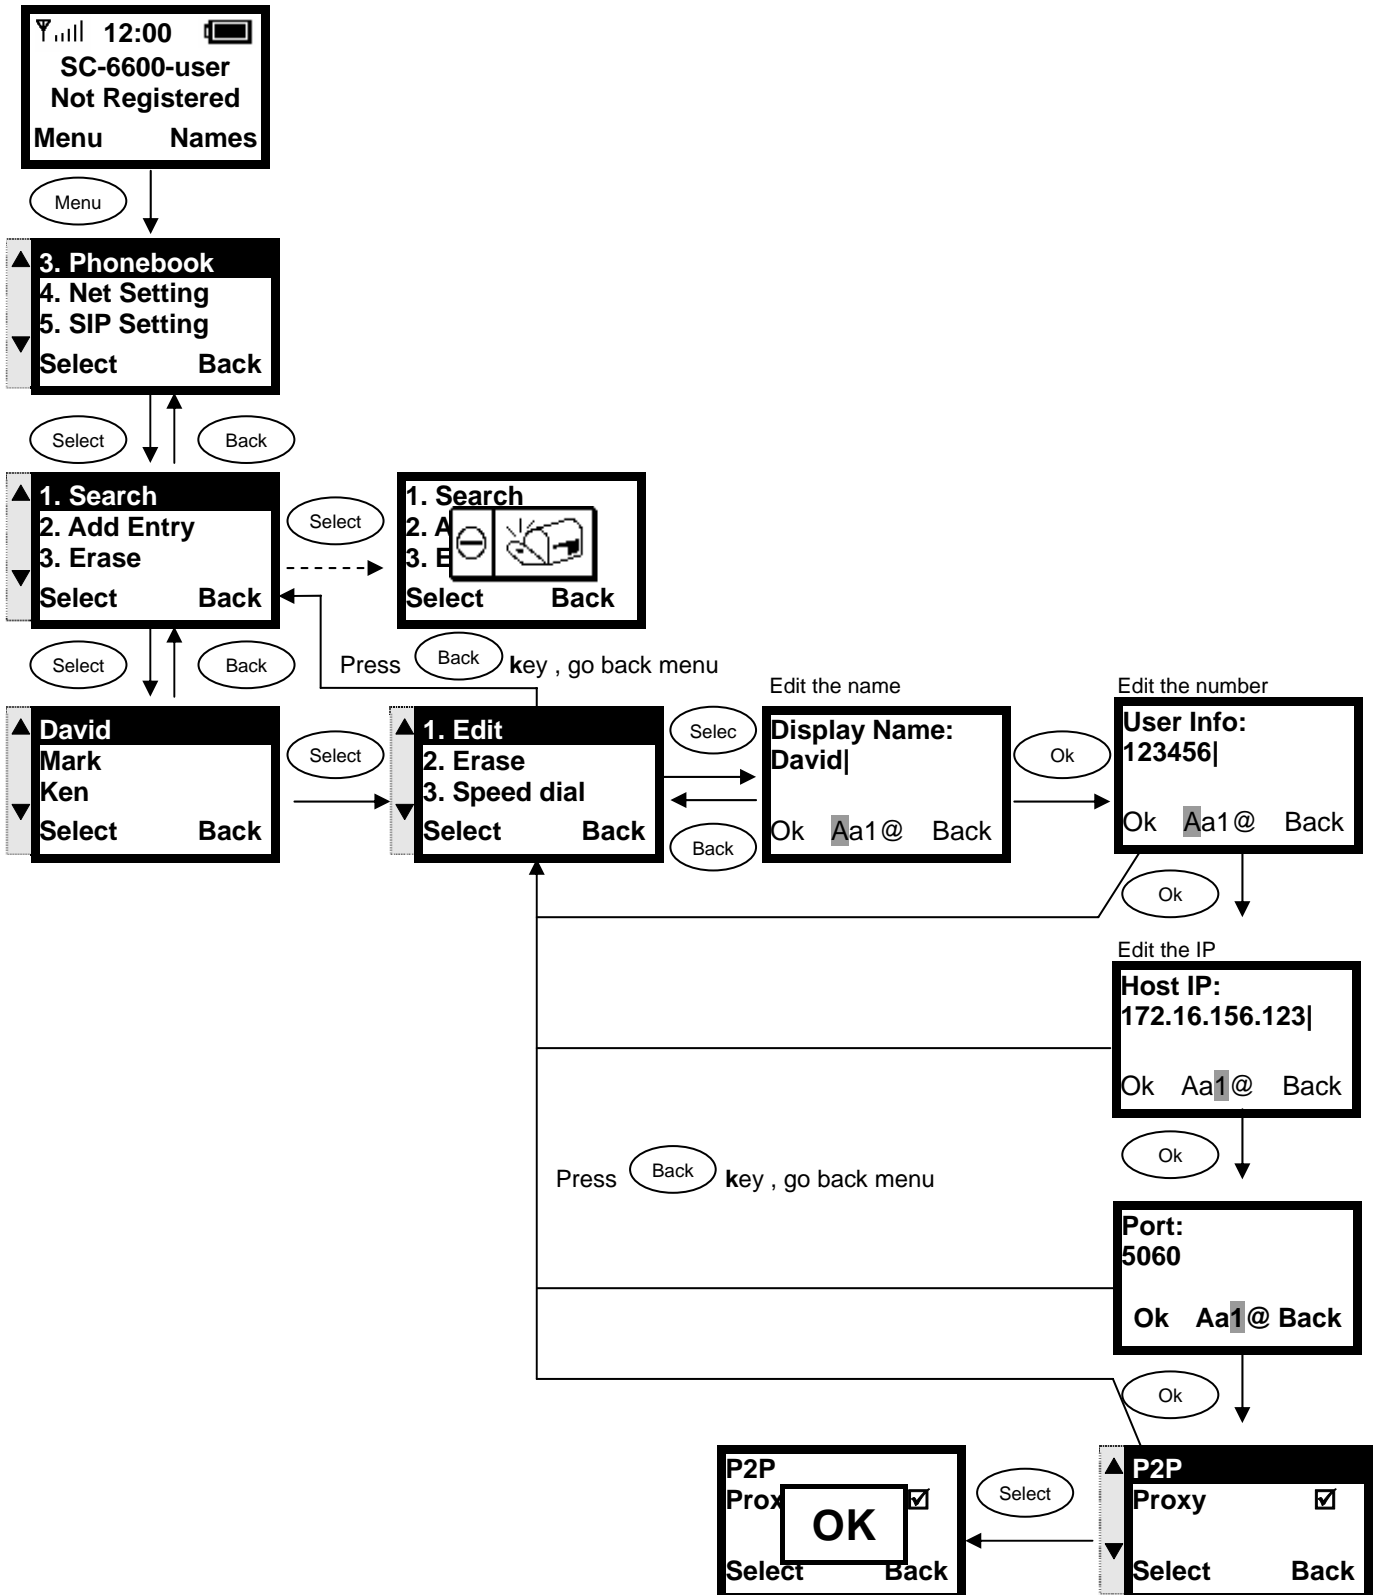

3.4.2. Searching Phonebook Entries - Erase Entry

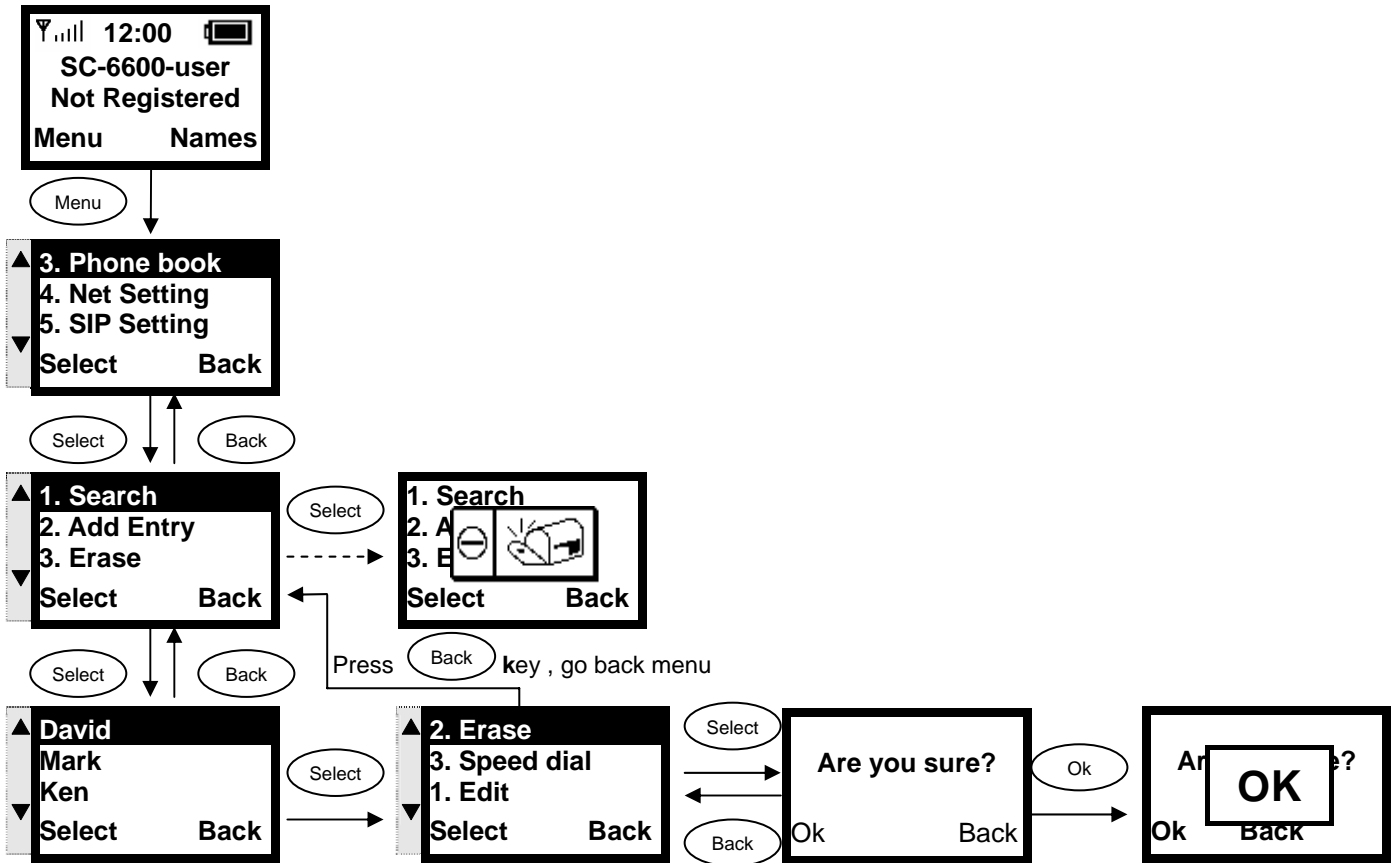


3.4.3. Searching Phonebook Entries – Speed dial Entry

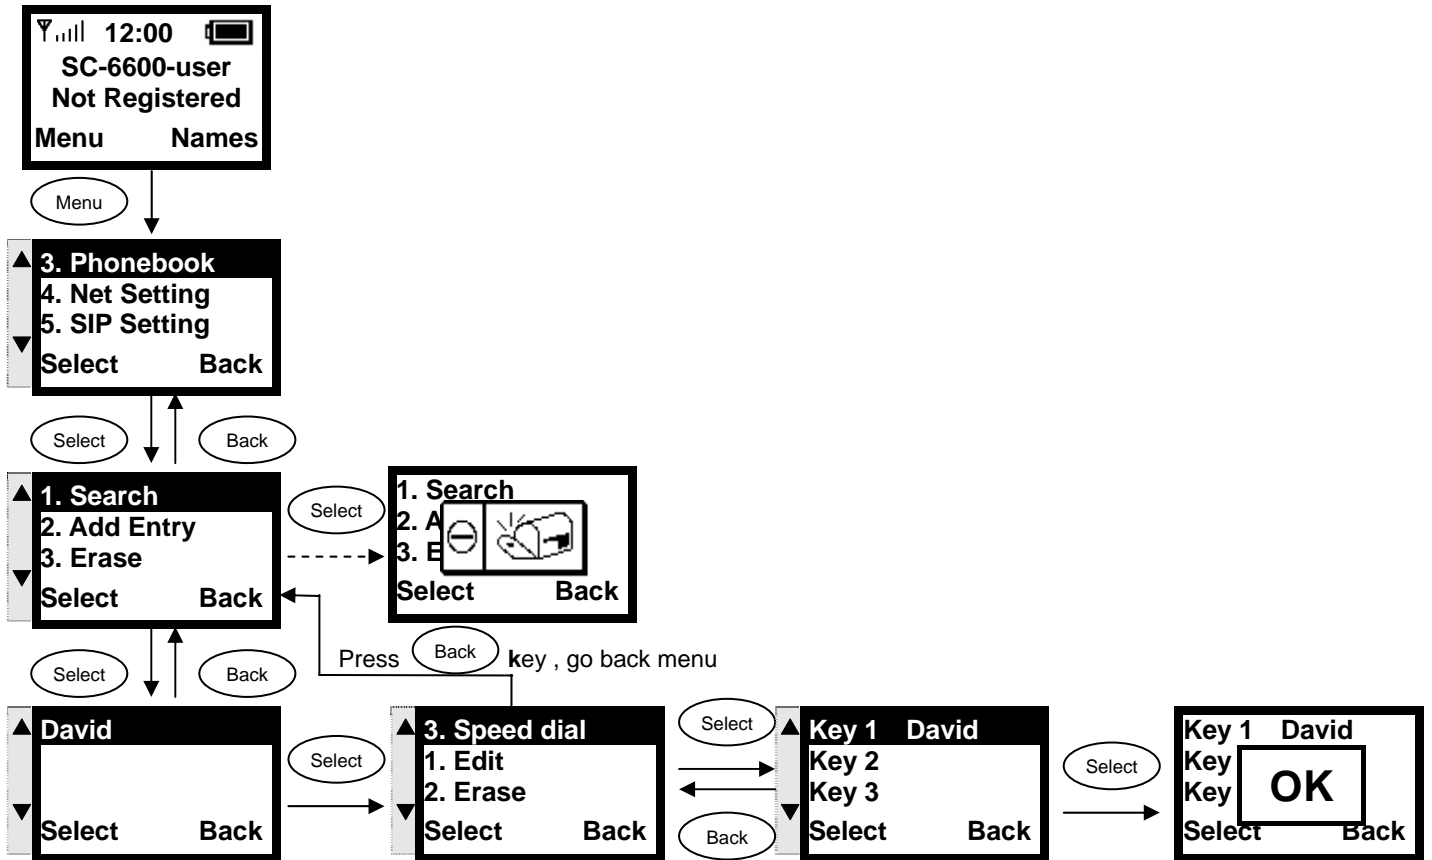


3.4.4. Adding a Phonebook Entry

This section provides information on adding a new entry in your Phonebook.

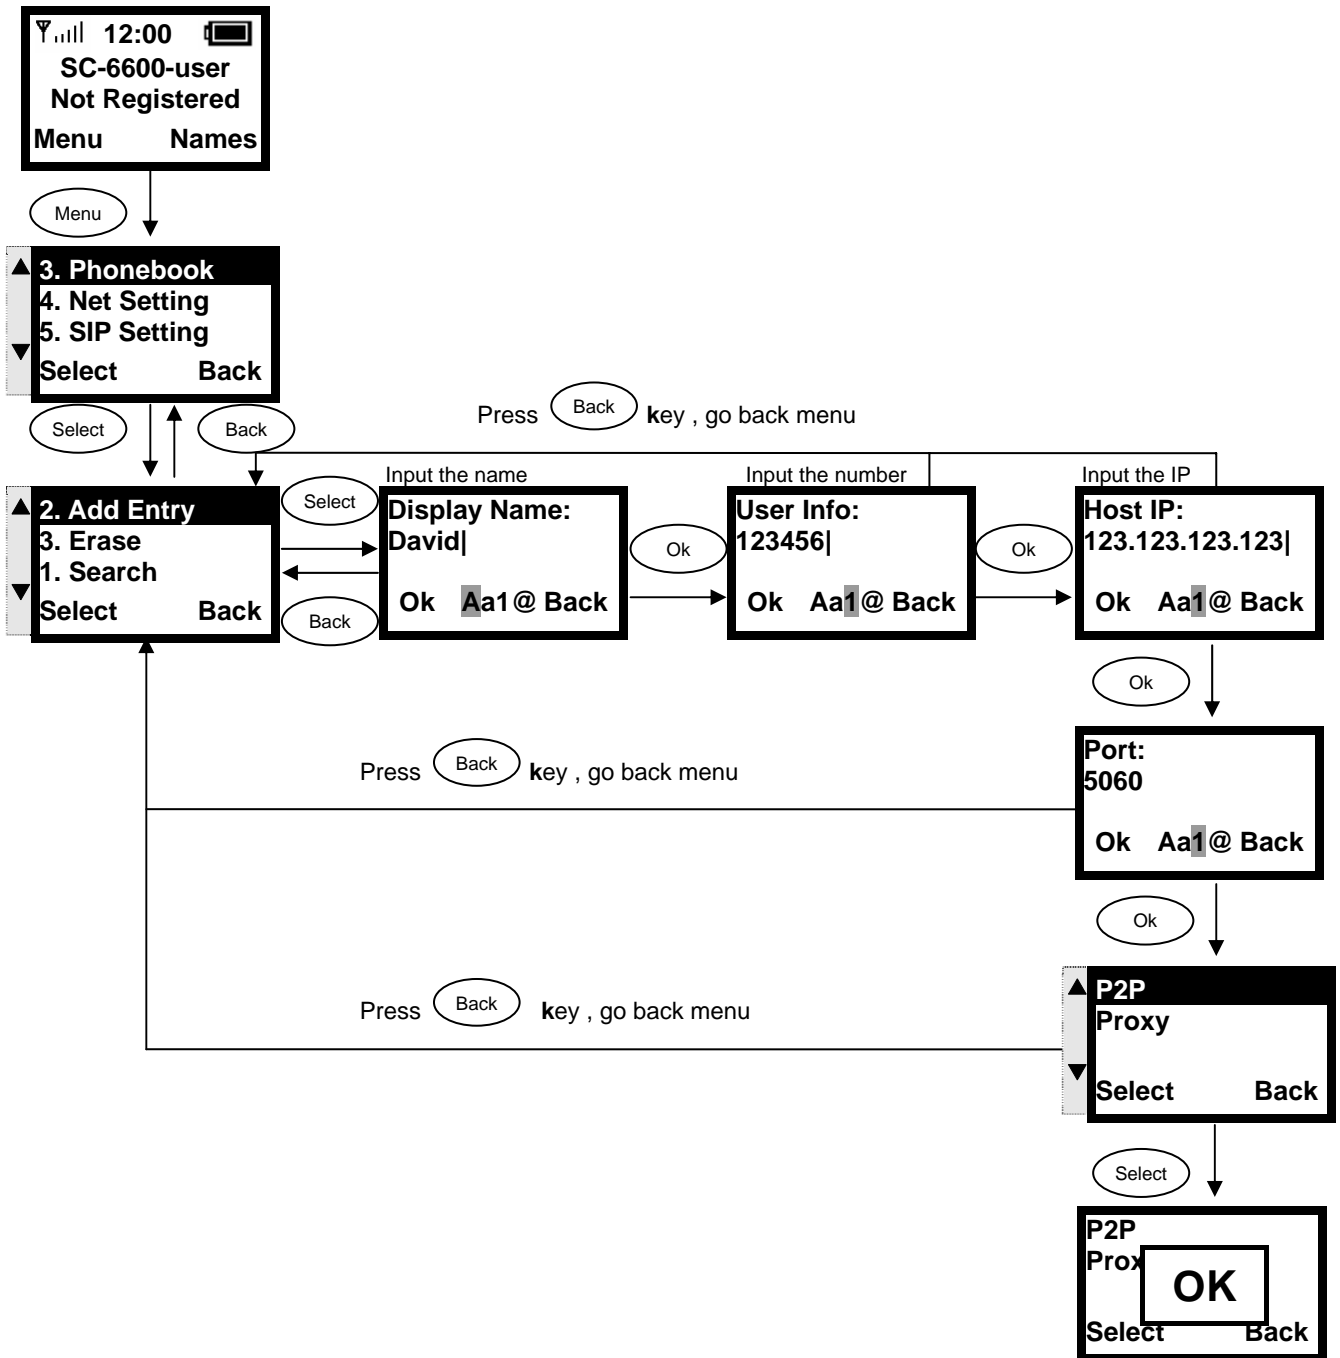


3.4.5. Erasing Phonebook Entries - One By One

This section explains how to erase an existing entry from your Phonebook.

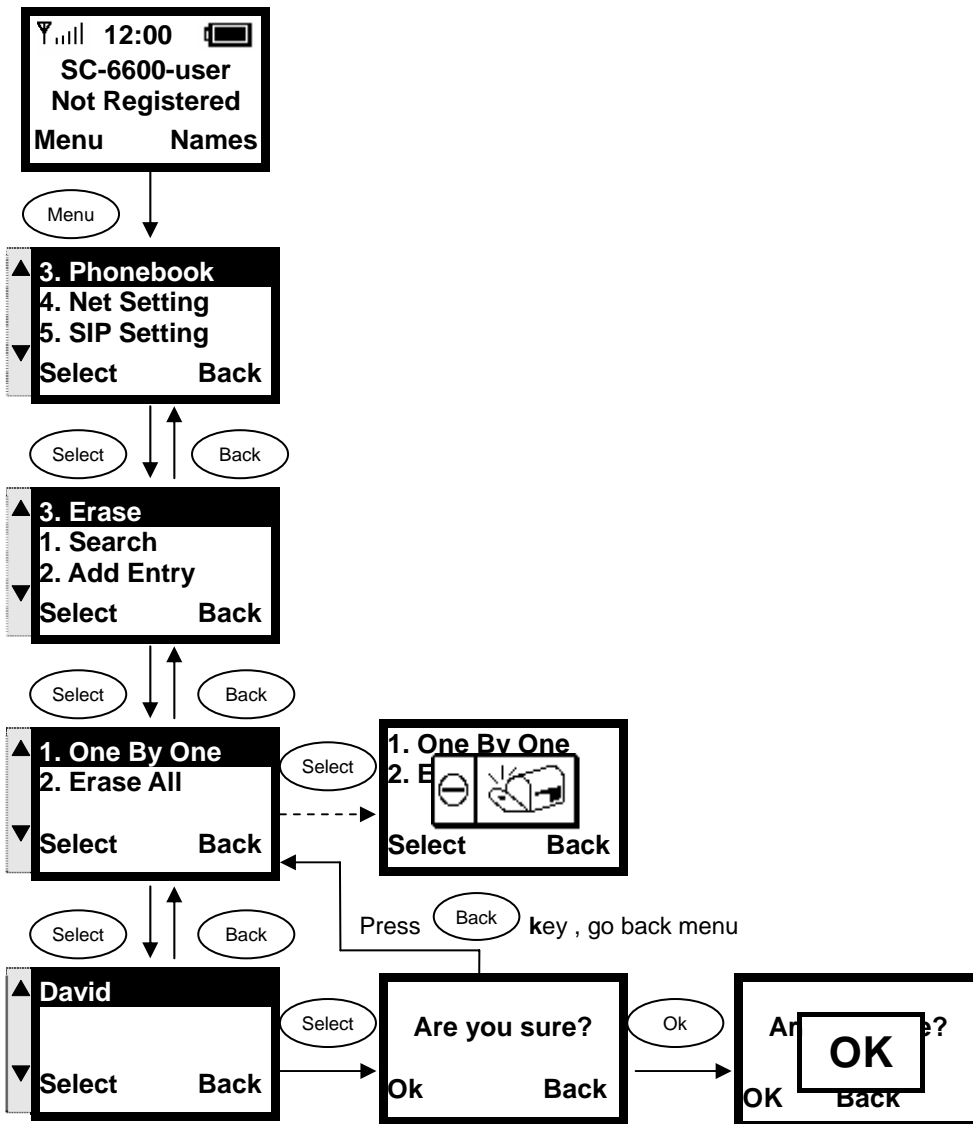

3.4.6. Erasing Phonebook Entries - All

This section explains how to erase all entries from your Phonebook.

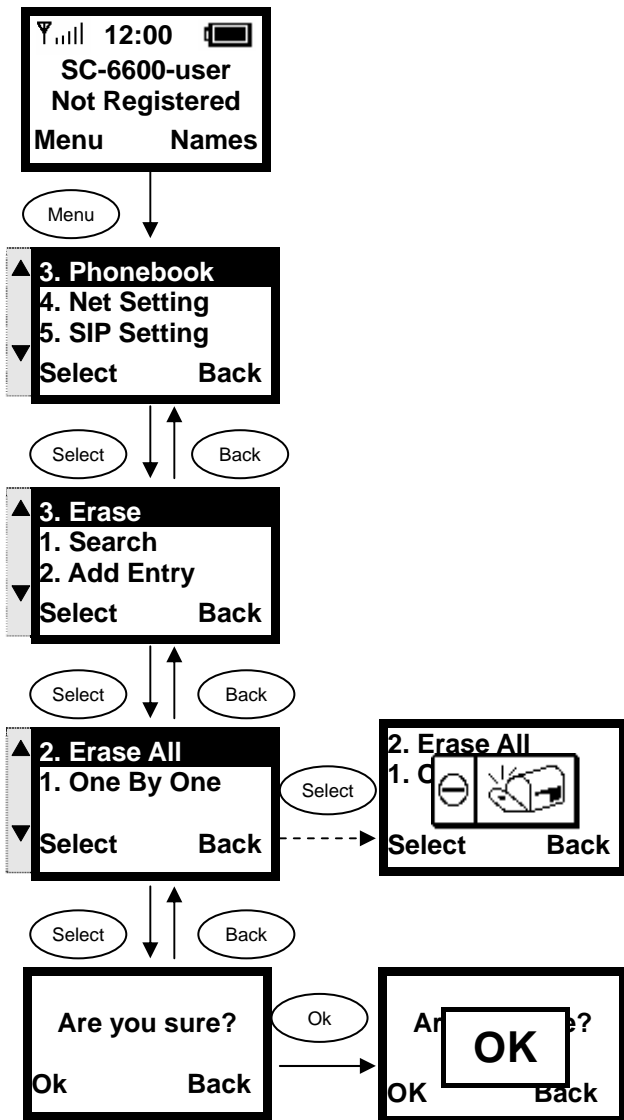


3.5. Call History

Call History is a useful feature for checking missed calls, then edit, save and dial the selected phone number.


3.5.1. Missed Call

This option allows you to check for missed calls, then edit, save and dial the selected phone number.

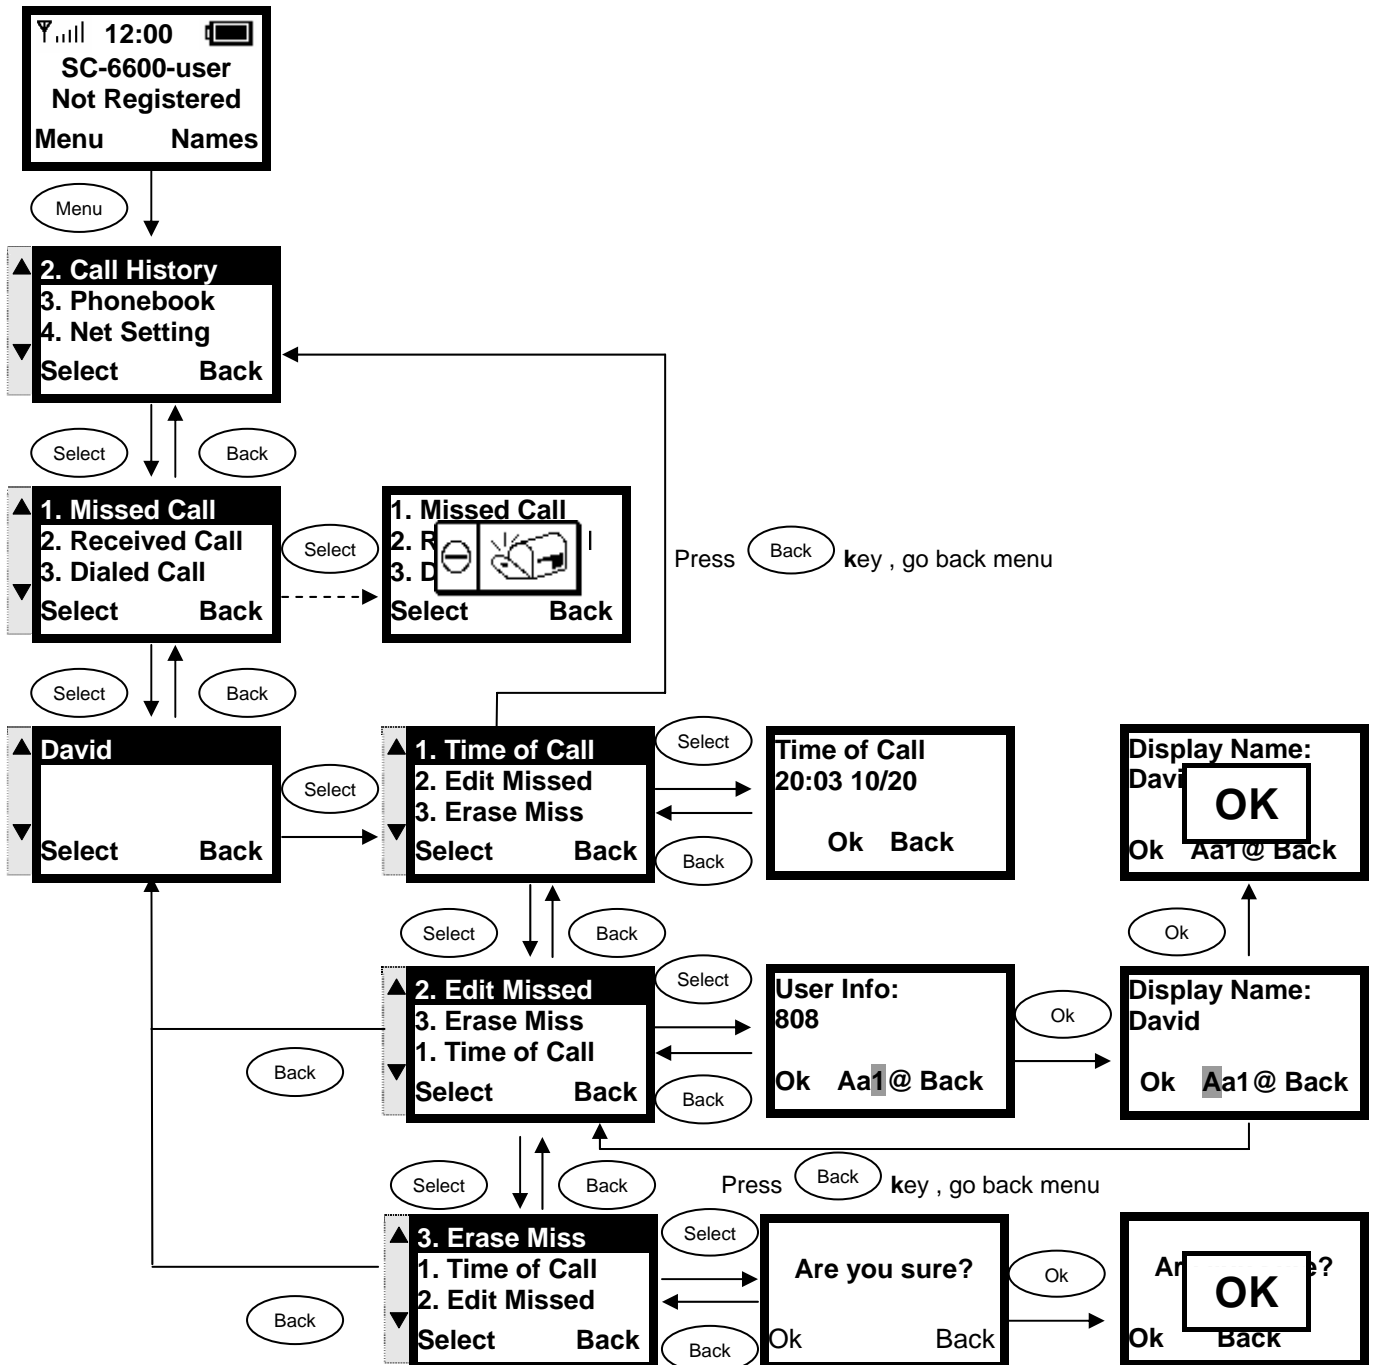


3.5.2. Received Call

This option allows you to check for received calls, then edit, save and dial the selected phone number.

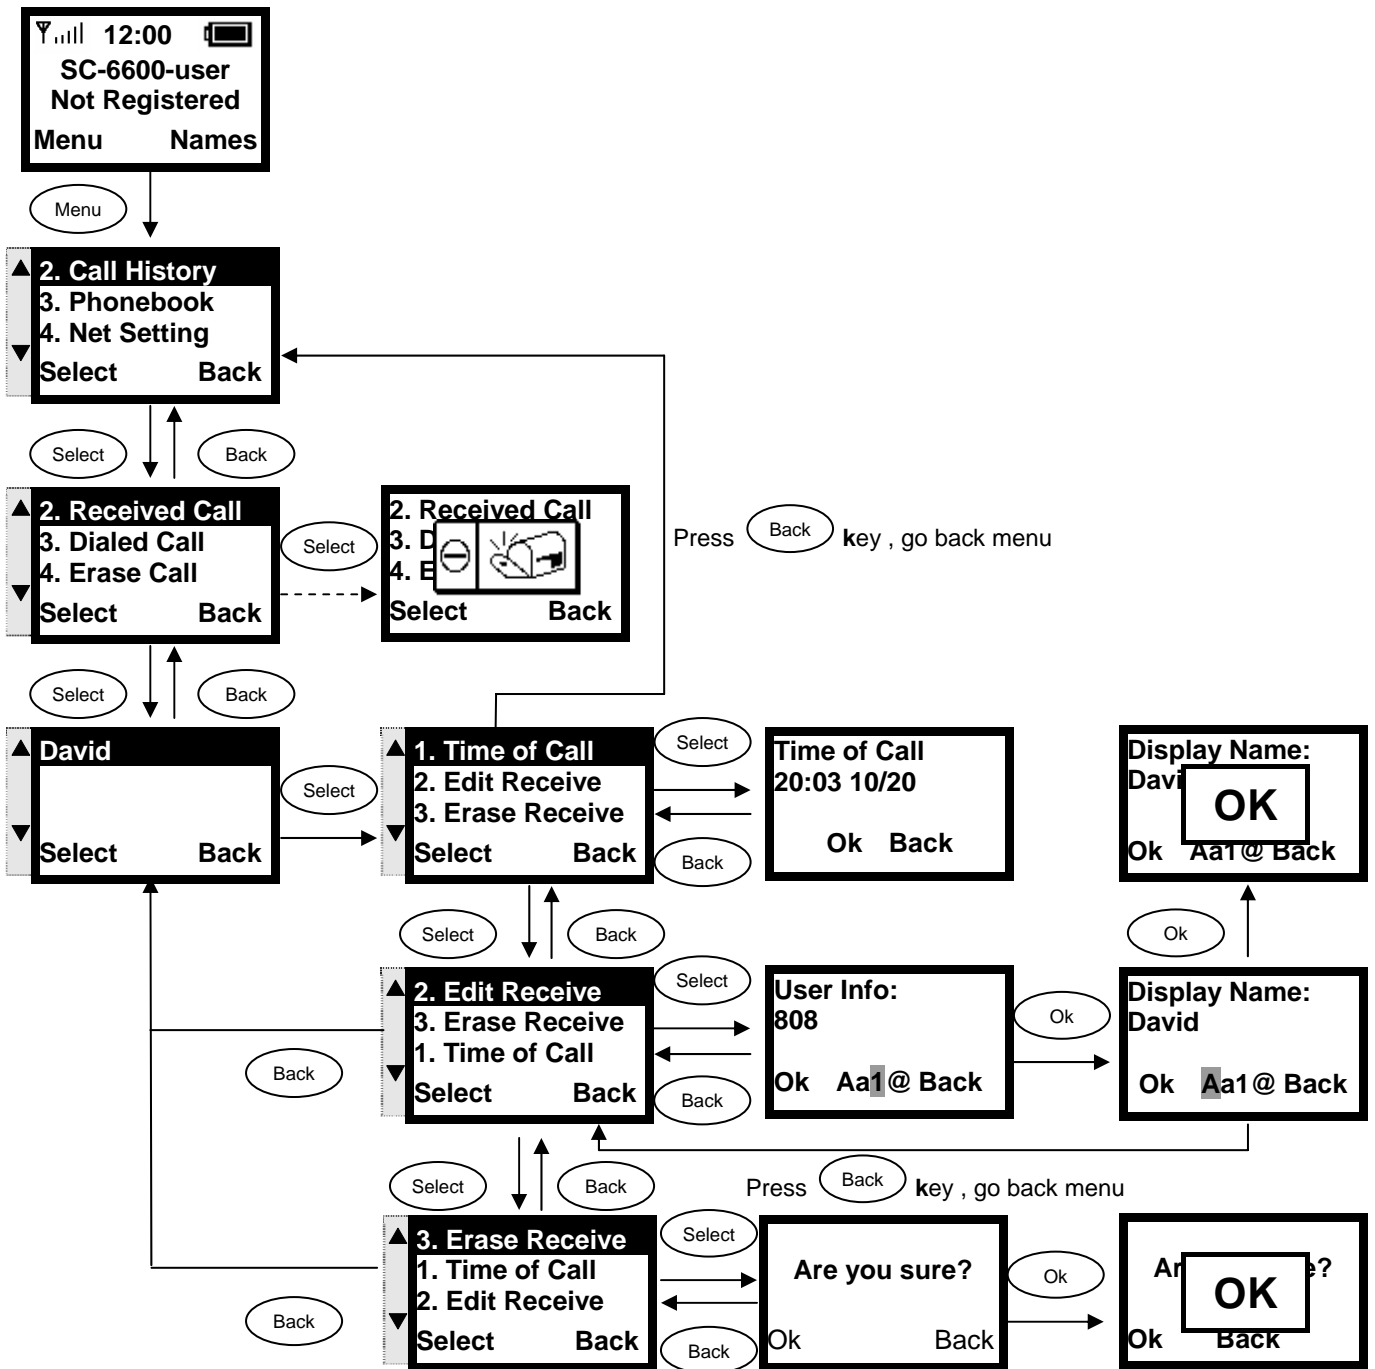


3.5.3. Dialed Call

This option allows you to check for dialed calls, then edit, save and dial the selected phone number.

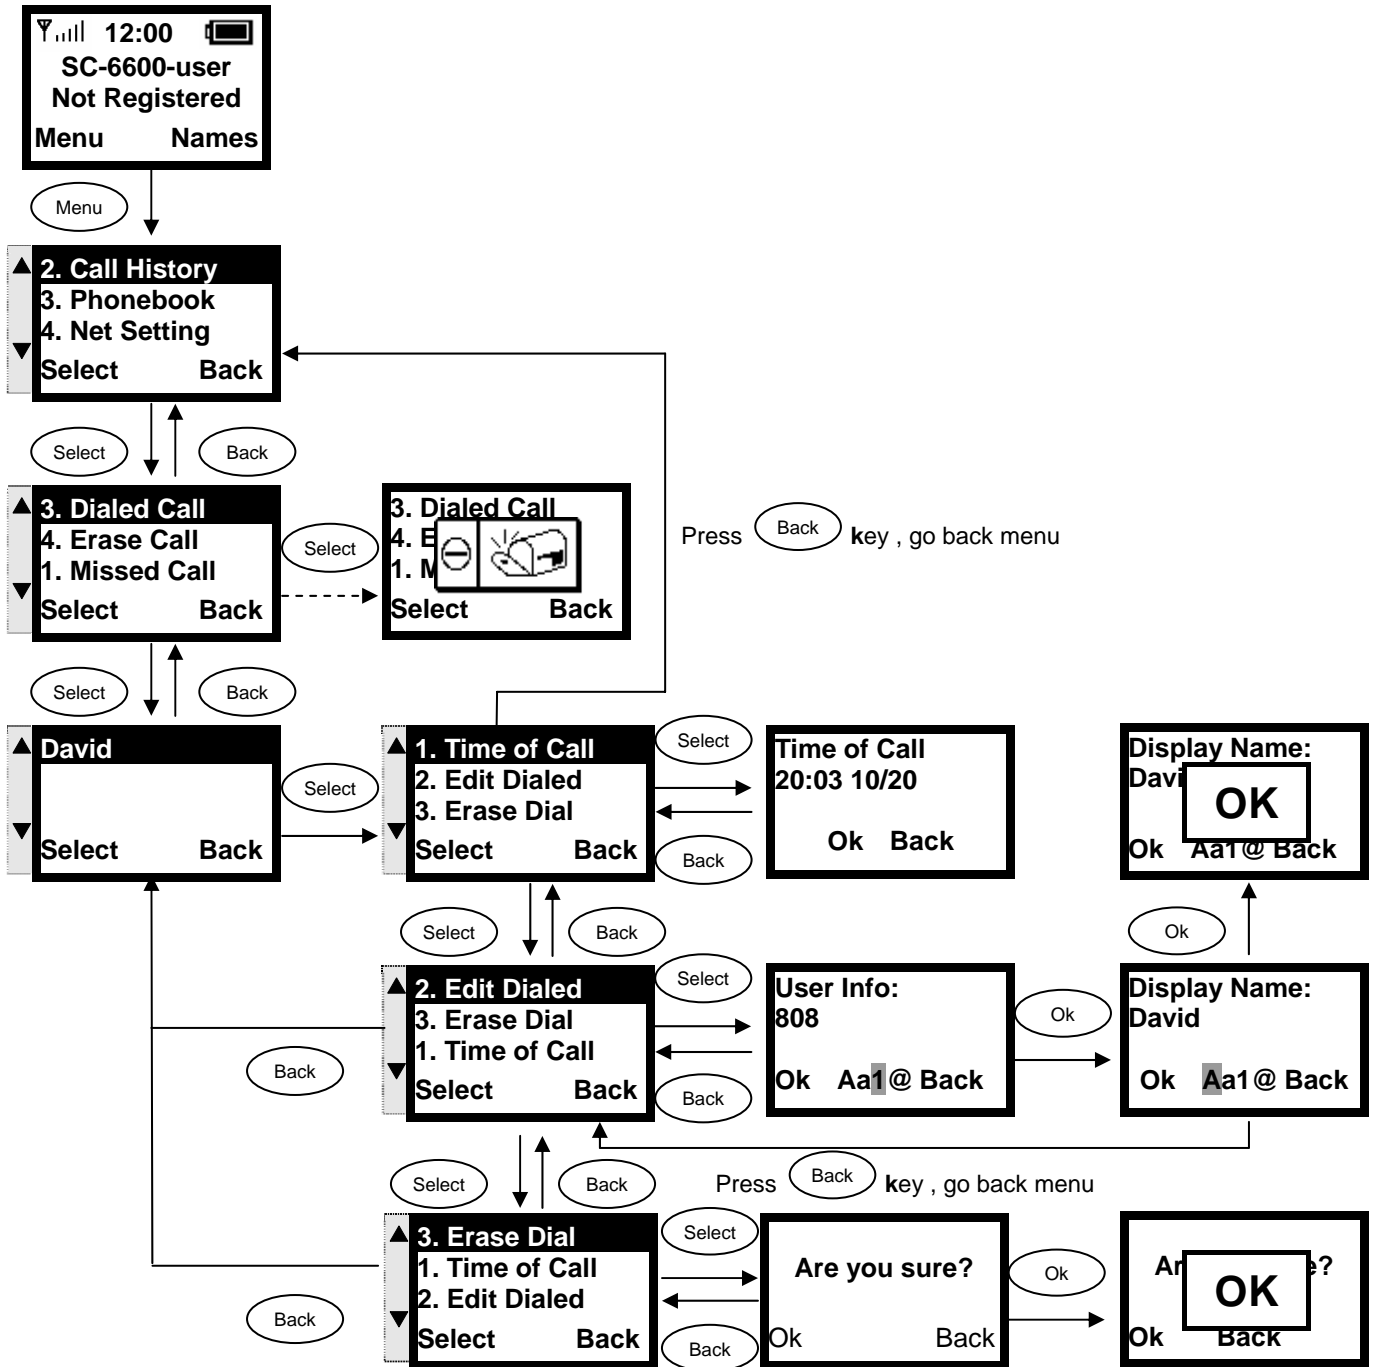


3.5.4. Erasing Call

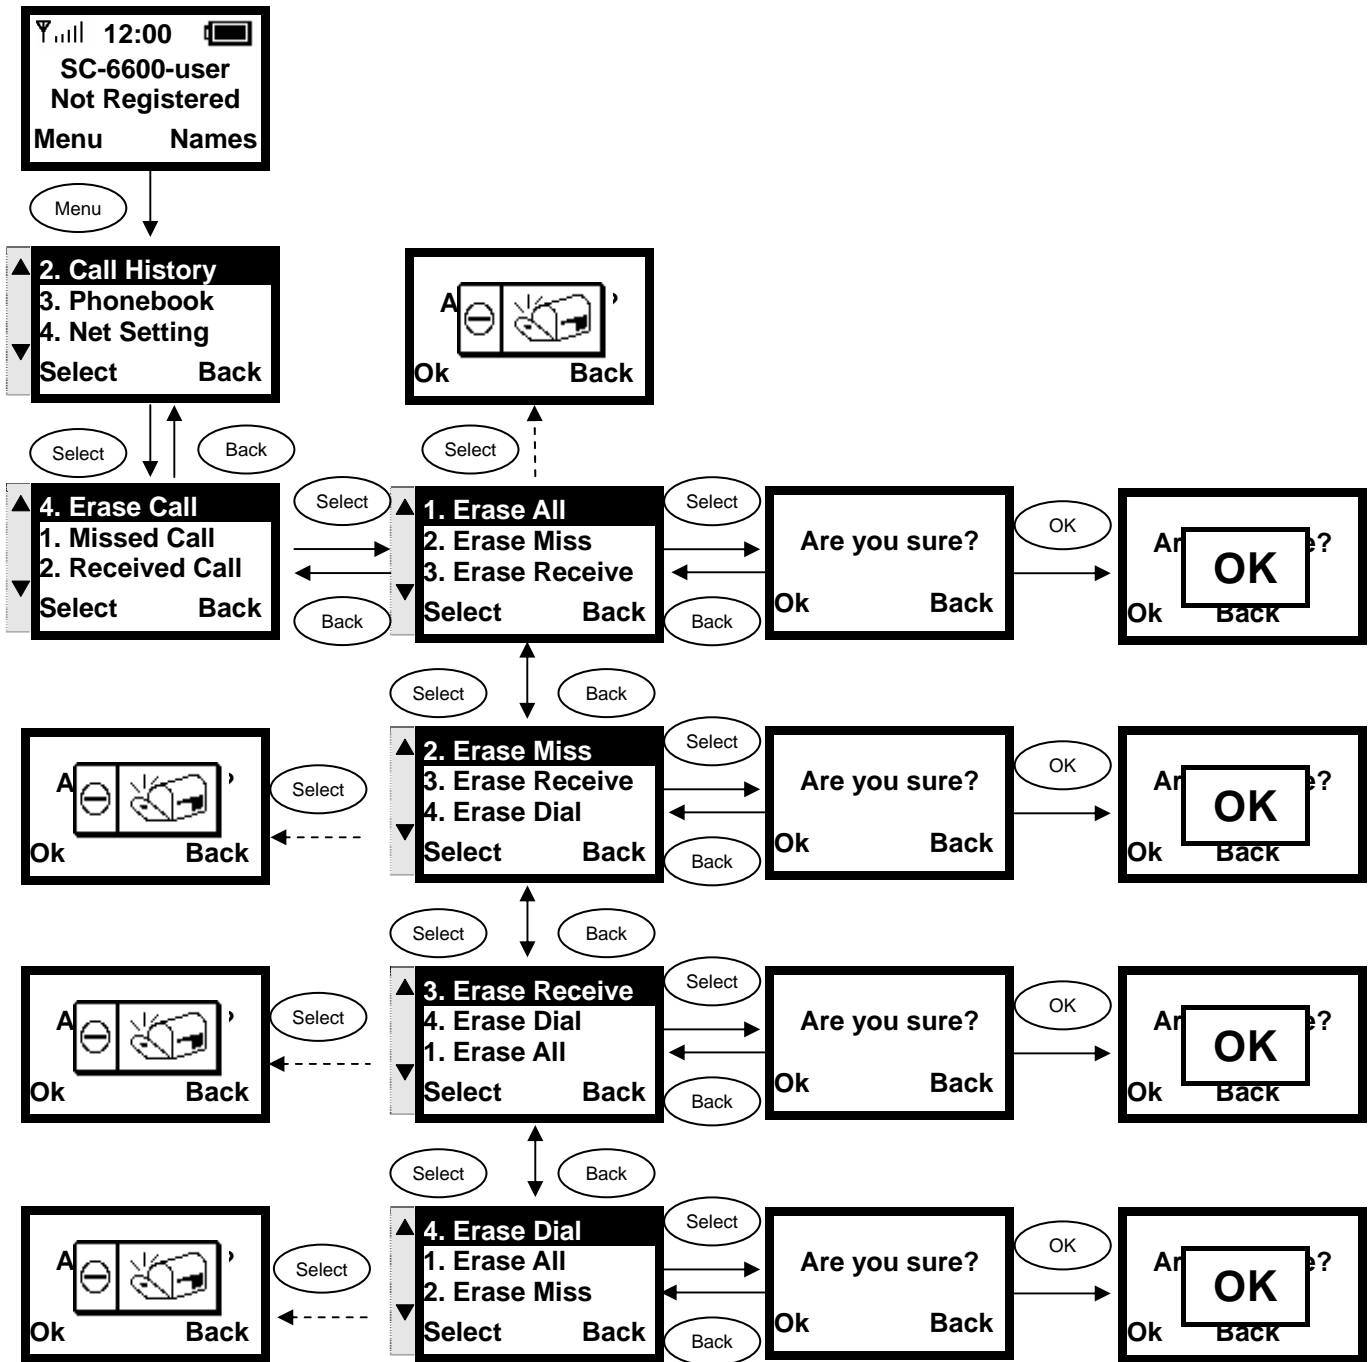


3.6. Settings

This section describes how to modify melody, ring volume, time, banner, etc.

3.6.1. Setting the Ring Melody

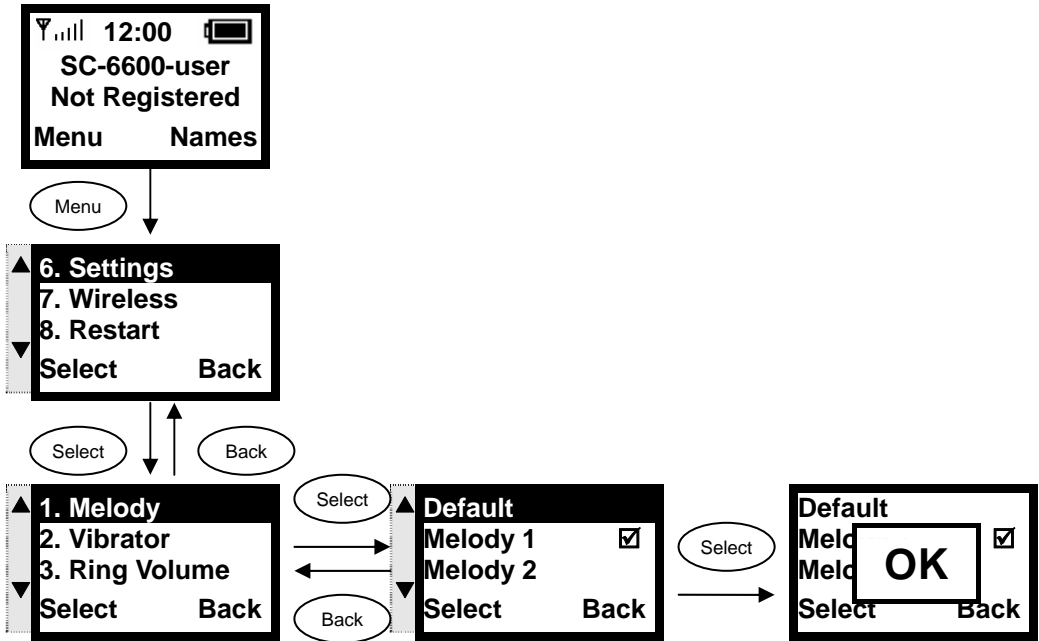


3.6.2. Setting the Vibration Mode

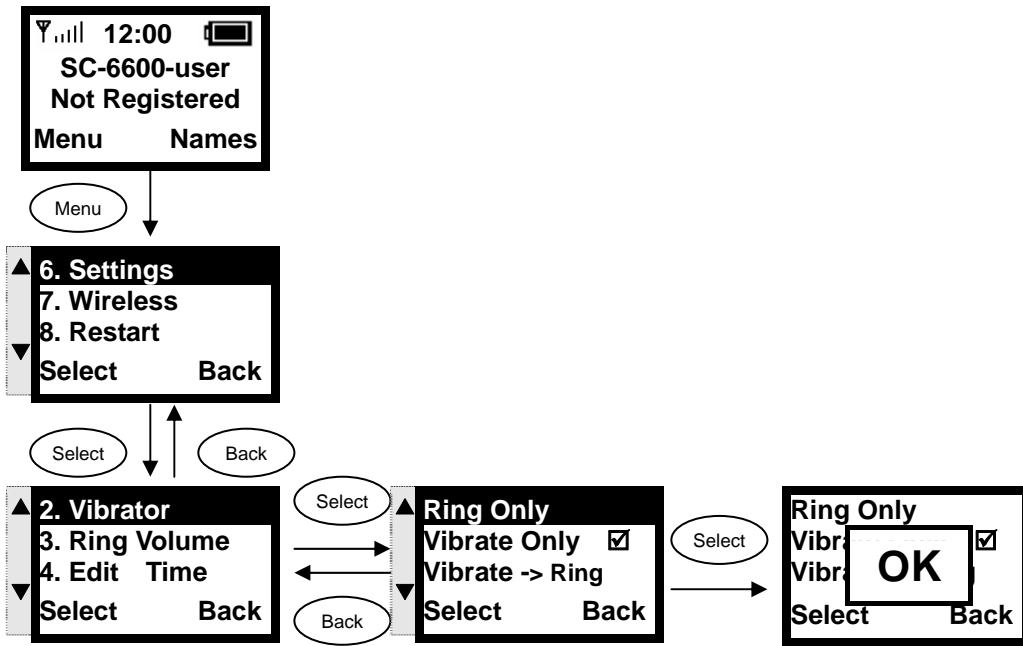


3.6.3. Adjusting the Ring Volume


Use the left / right arrow keys (◀ / ▶) to decrease / increase the ring volume.

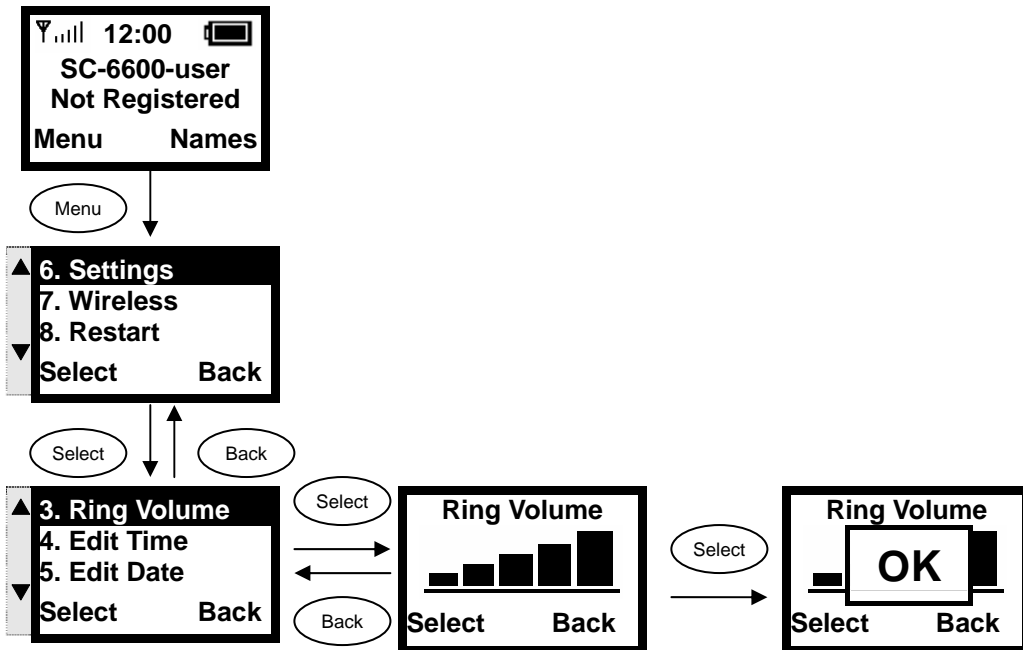


3.6.4. Setting the Time

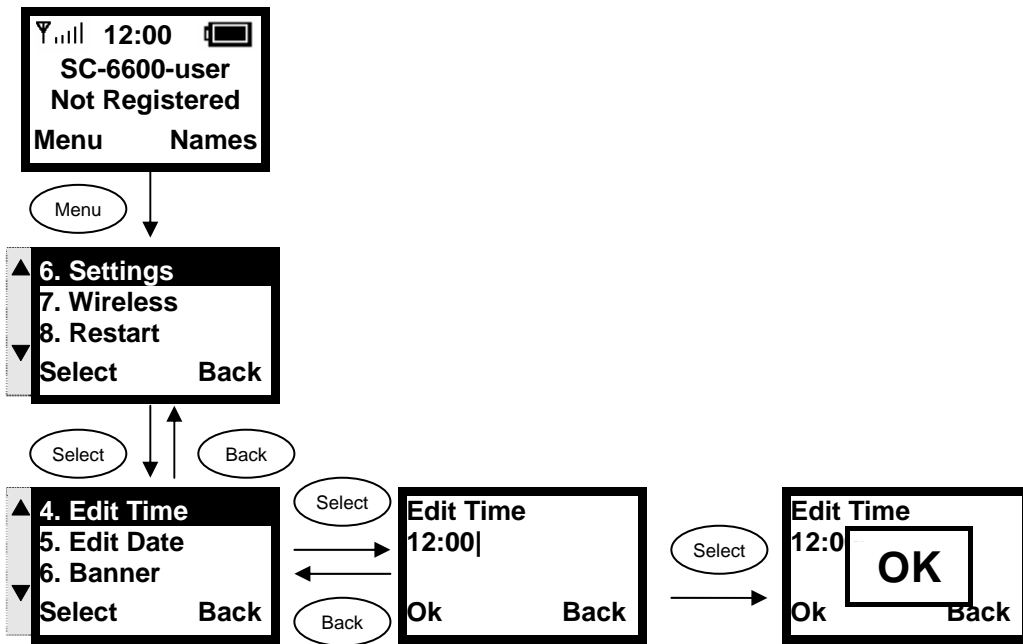


3.6.5. Setting the Date

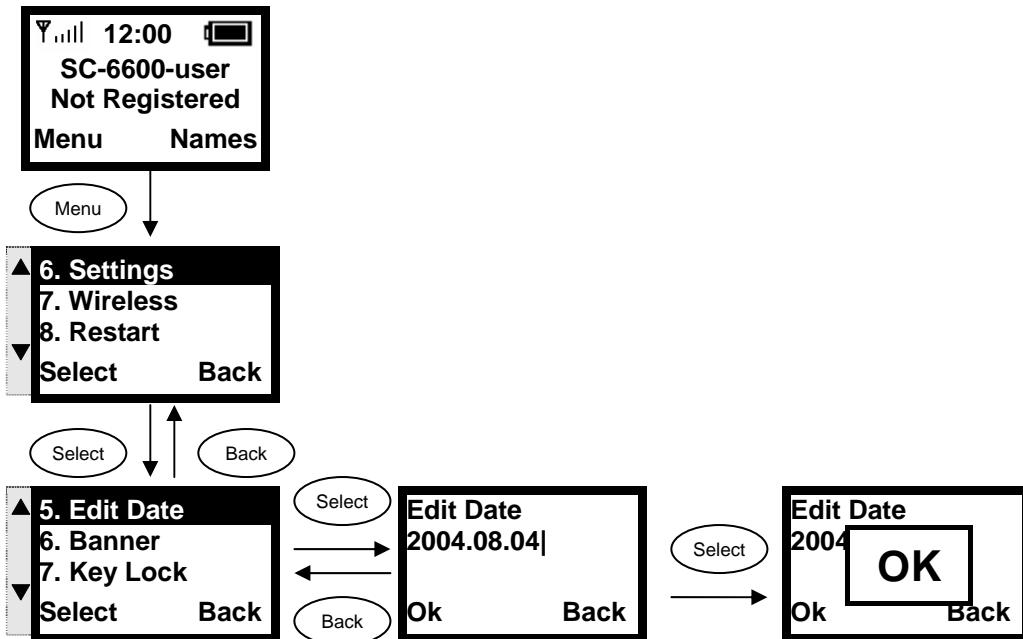


3.6.6. Setting the Banner

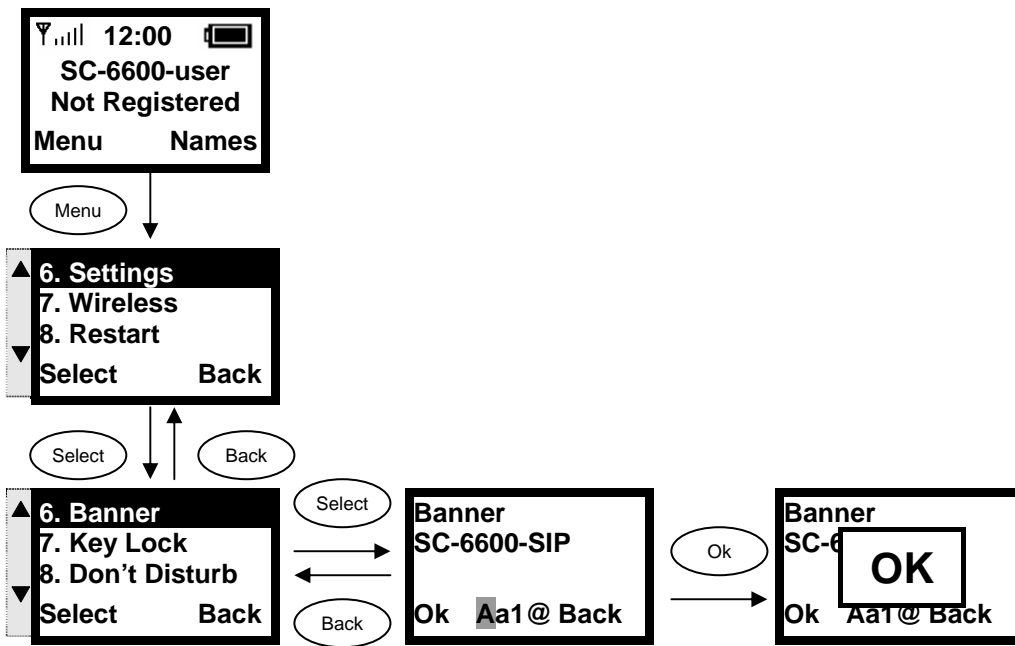

3.6.7. Setting the Key Lock

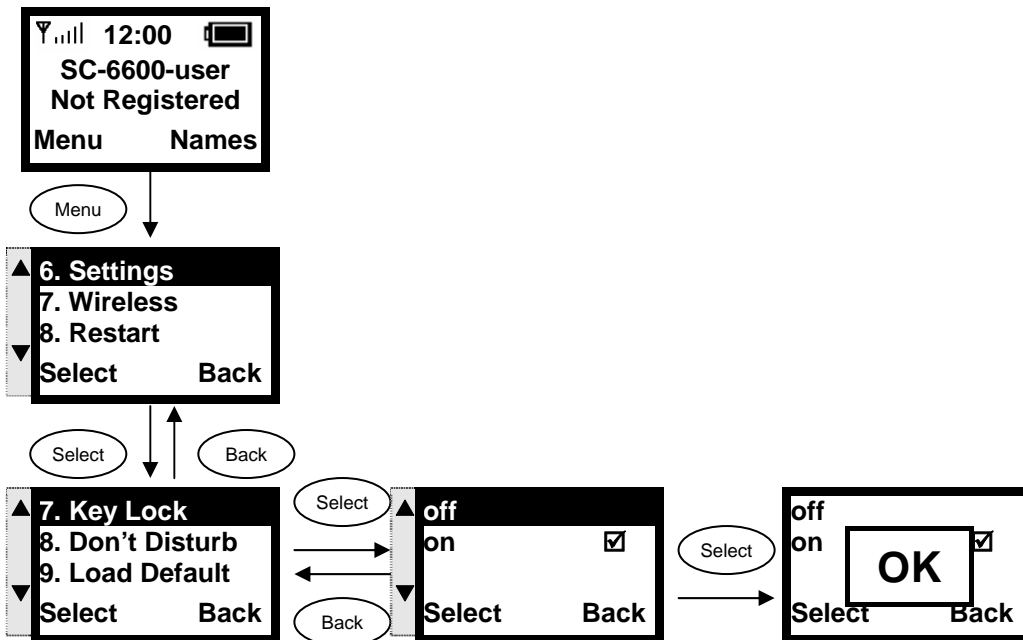

3.6.8. Don't Disturb

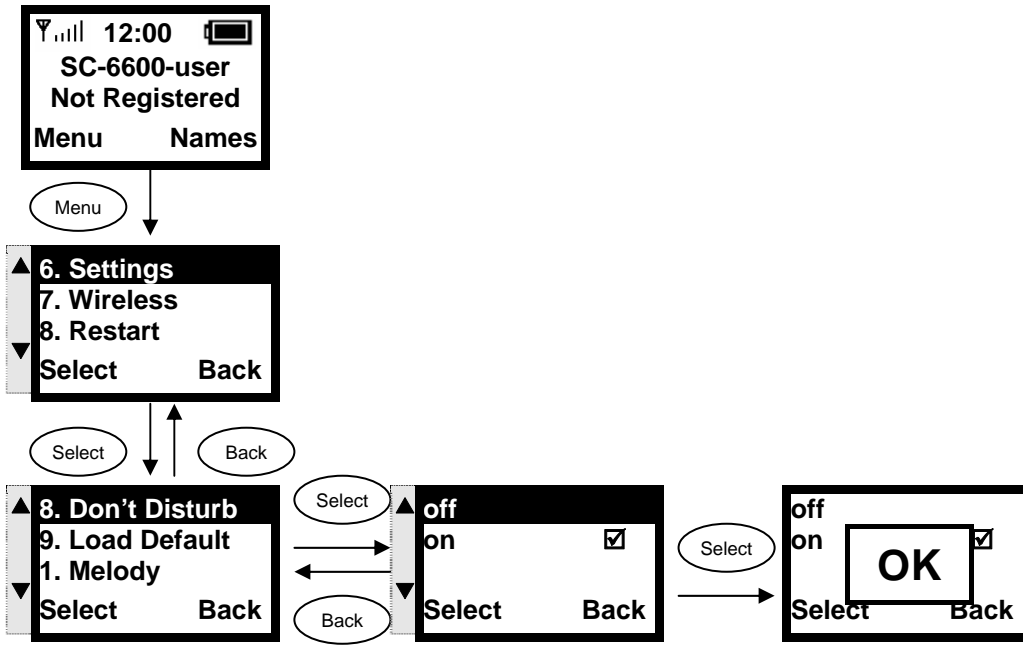

4. Web Configuration


This chapter explains how to use the SC-6600 web interface to configure your wireless IP phone.

4.1. Login Password

Use your browser to access the SC-6600 web page – in the Address field, type: <http://<ipaddress>>, then click the Go button.

SC-6600 offers two default accounts:

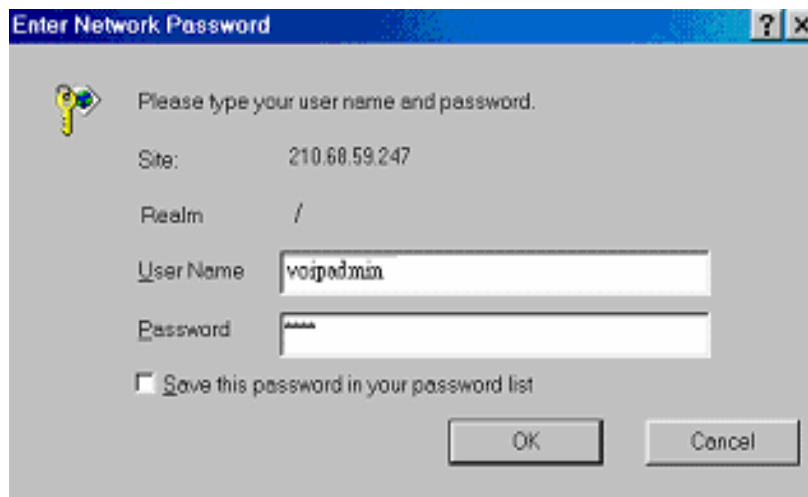

1. the user's account,
User Name: **user**
Password: **1111**
2. and the administrative account
User Name: **voipadmin**
Password: **admin**





The main web page is divided into several frames, each related to a VoIP module. It includes information, network settings, SIP proxy server settings, registrar server settings, phone book settings, voice codec settings, voice quality settings, system settings, and update settings.

5. Basic Phone Tasks

5.1. Dialing a Phone Number

1. In idle state, enter a phone number by using the numerical keys.
2. If you have entered an incorrect number, press the  key to delete it.
3. Press the  key to connect your call.

5.2. Redialing a Phone Number

1. In idle state, press the  key.
The list of placed calls is displayed.
2. Scroll through the list by using the ▲ or ▼ key.
Press the  key to make the call.

5.3. Answering a Call

To answer a call, press the  key.

To reject a call, press the  key.

6. Display Messages

6.1. Error Messages

Error messages are displayed to let you know that an error has occurred. These error messages may prevent you from connecting to the network or from using the phone. You may need to contact the system administrator to resolve the problem.




Error 1: No AP found (📶 blinking)

The ESSID set on the phone does not match any of the Service Set Identifiers (SSIDs) of the AP in the network.



Error 2: Net Fail! (DHCP)

The phone failed to obtain the IP address from the DHCP server, or failed to authenticate due to a Wep Key error.

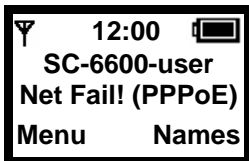

Error 3: Net Fail! (PPPoE)

The phone failed to obtain the IP address from your ISP service.



Error 4: Registering to SIP proxy failed

The phone failed to register with the SIP Proxy. It could be due to the WEP key or SIP proxy setting error. Please contact your service provider, or check your SIP Settings.

6.2. Warning Messages

Warning messages are displayed when the phone detects a condition that may disrupt your phone service.




Warning 1: No display when the phone is seated in the charger.

- **Situation 1:** The phone is seated in the charger but there is no LCD display and back light, even if it has been powered on.
- **Situation 2:** The phone is seated in the charger but there is no LCD display; the back light is on.

Corrective Action:

Place the phone in the charger and turn off the power. Keep the phone in the charger for approximately 30 seconds. Then remove it from the charger briefly, for approximately 2 seconds. Place the phone back in the charger and it will automatically turn on.

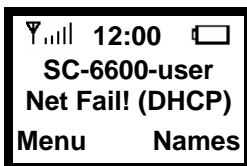

Warning 2: Battery Low (🔋blinking)

The battery energy level is low.

Corrective Action: Recharge the battery.



Warning 3: Weak signal detected (📶blinking)

The signal quality is low.

Corrective Action:

Connect to another AP. Move your phone closer to the AP. There may be too much radio interference (for example a microwave or another AP using the same channel) around your wireless network. Relocate or reduce the radio interference.